



User Guide

SE Host Services API

Version 1.103.0

SERVICES Library 0.50.3

Table of Contents

Introduction	7
SERVICES Library Change log	8
SERVICES Library Pairings.....	10
Known Limitations	11
A32	11
SE-UART Spamming	11
SE Host Services summary	11
SE Host Services Delivery Components	14
Pre-requisites	14
Building SE Services – Windows / LINUX	15
Building with ARM GNU C.....	16
Building with ARM CLANG	16
SERVICES Library Dependencies	16
CMSIS Package	16
JSON Configurations	17
Power Example	17
Power Example Use Cases	18
BASIC1 (No XIP).....	18
BASIC2 (XIP).....	18
BASIC3 (No XIP).....	18
BASIC4 (No XIP).....	18
BASIC5 (No XIP).....	18
BASIC6	18
BASIC7 (No XIP).....	18
BASIC8 to BASIC13 Clock configuration examples (No XIP).....	18
BASIC14 GET request examples (No XIP)	18
BASIC15 Clock Source Cycling (No XIP)	19
BASIC16 M55s run in TCM not retained (No XIP)	19
BASIC17 PD5=OFF and Wake up	19
Power Consumption Examples	19
SES Power Policies.....	19
Power Example Running – Debugging common issues	20
ISP Nor responding.....	20
Cannot use UpdateSystemPackage	20

PPU Interrupt Spamming	20
Power Examples Limitations	21
SES Clock Policies	21
SERVICES test harness example	22
Examples customization options.	22
Changing CMSIS Packs	22
Building and running the Examples	23
Building the M55 HE Example - run from TCM.....	23
Building the M55 HE Example - run from MRAM.....	23
Building and running the M55_HE Power Example (ARM Clang).....	24
Building and running the M55_HE Power Example (ARM GNUC)	24
Building and running the M55_HP Power Example (ARM Clang).....	24
Building and running the M55_HP Power Example (ARM GNUC)	24
Building and running the STOC update example	25
Building SE Host Services – LINUX.....	25
Installing examples.....	26
Installing examples to a different location	26
Running with SERVICES Debug disabled	28
Building the M55 Host Example under ARM-DS.....	29
Adding ALIF SE SERVICES to your Application code	30
SE Host Services Library API.....	30
Host Services Library Interface API Porting Layer.....	31
SERVICES_wait_ms.....	31
SERVICES_send_mhu_message_to_se	31
Host Services Library API Layer	31
SERVICES_initialize	31
SERVICES_send_request	32
SERVICES_send_msg_acked_callback.....	32
SERVICES_rx_msg_callback.....	32
SE Host SERVICES Library	33
SE Host SERVICES Library - Anatomy of a SERVICE Call	33
SE Host Service Library Internal implementation	33
SE Host Service Library Transport Protocol details.....	34
SE Host Service Library Transport Error Codes	34
SE Host Services Library Error Handling.....	35

SE Host Services Library	Memory handling	35
SE Host Services API	36	
Miscellaneous	36	
SERVICES_Initialize.....	36	
SERVICES_version.....	38	
SERVICES_register_channel	39	
SERVICES_prepare_packet_buffer.....	40	
Maintenance Services	41	
SERVICES_heartbeat	41	
SERVICES_synchronize_with_se	42	
System Management	43	
SERVICES_system_set_services_debug	43	
SERVICES_system_read_otp	44	
SERVICES_system_write_otp	45	
SERVICES_system_get_otp_data	45	
SERVICES_system_get_toc_data	46	
SERVICES_system_get_toc_number	48	
SERVICES_system_get_toc_version	49	
SERVICES_system_get_toc_via_name	50	
SERVICES_system_get_toc_via_cpuid	51	
SERVICES_system_get_device_part_number	53	
SERVICES_system_get_device_data	54	
SERVICES_get_se_revision	56	
SERVICES_system_get_eui_extension	57	
Application Services	58	
SERVICES_uart_write	58	
SERVICES_pinmux	59	
SERVICES_padcontrol.....	59	
SERVICES_application_ospI_write_key.....	60	
Power Services	62	
SERVICES_power_stop_mode_request	62	
SERVICES_power_ewic_config.....	63	
SERVICES_power_wakeup_config	64	
SERVICES_power_mem_retention_config.....	66	
SERVICES_power_m55_he_vtor_save.....	68	

SERVICES_power_m55_hp_vtor_save.....	70
SERVICES_corestone_standby_mode.....	72
SERVICES_power_memory_req.....	74
SERVICES_get_run_cfg.....	75
SERVICES_set_run_cfg	76
SERVICES_get_off_cfg.....	77
SERVICES_set_off_cfg	78
SERVICES_power_dcdc_voltage_control.....	79
SERVICES_power_ldo_voltage_control	79
SERVICES_power_setting_configure.....	80
SERVICES_power_setting_get.....	81
Clocks Services	82
Clock frequency definitions	82
SERVICES_clocks_select_osc_source	83
SERVICES_clocks_select_pll_source	85
SERVICES_clocks_enable_clock	86
SERVICES_clocks_set_ES0_frequency.....	87
SERVICES_clocks_set_ES1_frequency.....	87
SERVICES_clocks_select_a32_source	88
SERVICES_clocks_select_aclk_source	89
SERVICES_clocks_set_divider.....	90
SERVICES_clocks_get_clocks.....	91
SERVICES_clocks_get_apb_frequency - OBSOLETE	92
SERVICES_clocks_get_refclk_frequency - OBSOLETE	93
SERVICES_clocks_setting_get	93
SERVICES_pll_xtal_start.....	95
SERVICES_pll_xtal_stop.....	95
SERVICES_pll_xtal_is_started.....	96
SERVICES_pll_clkpll_start.....	96
SERVICES_pll_clkpll_stop	97
SERVICES_pll_clkpll_is_locked	97
SERVICES_pll_initialize	97
SERVICES_pll_deinit	98
Boot Services.....	98
SERVICES_boot_process_toc_entry.....	98

SERVICES_boot_cpu.....	99
SERVICES_boot_set_vtor	100
SERVICES_boot_reset_cpu.....	100
SERVICES_boot_release_cpu	101
SERVICES_boot_reset_soc	102
Crypto Services.....	103
SERVICES_cryptocell_get_rnd.....	103
SERVICES_cryptocell_get_lcs	104
MbedTLS Services	105
Update Services	111
SERVICES_update_stoc	111
External System Services	113
Boot arguments	113
SERVICES_Boot_Net_Proc.....	113
SERVICES_Shutdown_Net_Proc.....	115
Document History	116

Introduction

The Fusion product series is a scalable SoC solution for IoT Edge Computing platforms.

SERVICES provide a method for the Application CPUs (M55_HE, HP, A32) to communicate with the Secure Enclave. This secure communication path is achieved using the MHU (Message Handling Unit) hardware block.

The SERVICES library consists of C code that interfaces with an MHU driver to facilitate this communication.

Services fall into the following categories:

- Non-Power
 - o Maintenance Services
 - o Crypto Services
 - o Update Services
 - o Secure Debug Service
 - o Application Services
- Power
 - o BASIC Use case examples
 - o Power number user case examples

The library source code is provided along with a test harness showing the invocation of each SERVICE library call.

The example (test harness) can be used as a framework to copy for integrating SERVICES into your application code. You only need to include the SERVICE header files and link with the SERVICE libraries.

The examples can be built for all Application cores in XIP and Non-XIP mode. ATOC configuration files are also provided.

ARM Clang and ARM GNU CC are both supported.

SERVICES Library Change log

- 0.50.3 Corrected Retention bit field masks
 - Ignore XIP build flag
 - UPD example changes
- 0.50.2 SERVICES_toc_info_t updated with extra fields.
 - adding SERVICES_system_gettoc_version API implementation for SE version
 - adding SERVICES_ERROR_INVALID_PARAMETER
 - nvds data added field for ESO internal clock selection field
 - SERVICES switch to CMSIS V1.3.0.
 - Updated Scatter file for ARM-DS
- 0.50.1 Updated contributed power examples
- 0.50.0 API for getting HFOSC and EXTSYS0/1 frequency
- 0.49.0 Deprecating SERVICES_system_get_toc_via_name
- 0.49.1 Updated examples for ALIF Update Package support.
- 0.48.0 Switch to external CMSIS source builds
- 0.047 Add Power setting Get/Configure API
- 0.046 Adding UPDATE STOC Service and test
- 0.045 Adding STOP, STANDBY Cycle tests
 - Adding SES Full update Service
- 0.044 Example test changes
- 0.043 SERVICES switch to CMSIS V1.0.0
- 0.042 Reduce the size of the packet buffer in the services examples
- 0.041
- 0.040 [aiPM] Define the parameter VDD_IOFLEX_3V3 as an enum
- 0.039 SERVICES switch to CMSIS V0.9.4
- 0.038 SERVICES switch to CMSIS V0.9.3
- 0.037 Scalable HFRC and HXTAL frequencies
- 0.036 SERVICES switch to CMSIS V0.9.1
 - arm clang startup issues
- 0.035 SERVICES build switch to CMake
 - addition of aiPM Service API - RUN
- 0.034 Addition of amPM Service API - OFF
 - retrieve full revision info
- 0.033 edits for simulation testing
- 0.032 Add a new service call SERVICES_boot_set_vtor
 - Use defines to support different power test variations
- 0.031 Warnings fixes
- 0.030 Fix services-he-hp-a32-xip.json HP address
- 0.029 Consistent Error handling
 - Memory Power On Off
 - Add boot services and clock tests
- 0.028 Add new warnings and do cleanup
- 0.027 Add new warnings and do cleanup
- 0.026 Retention fine grained control
 - CMSIS update build options
 - Add SERVICES_INVALID_ADDRESS error code

- 0.0.25 Clocks [apis](#)
- Retention APIs
- TEST Services initialize polling
- 0.0.24 GCC build for m55_power
 - Query TOC by [cpu](#) id returns N entries
- 0.0.23 CMSIS integration
- 0.0.22 Simplify error code usage at the services transport layer
- 0.0.21 Added build support for SPARK
- 0.0.20 Updated ALIF License
- 0.0.19 Adding CMake build
- 0.0.18 Stop mode power profile
- 0.0.17 Fixed unimplemented function warnings in GCC build
- 0.0.16 Update to RTSS V0.4.1
- 0.0.15 Added examples installation, fixed build flags
- 0.0.14 Addition of XIP examples
- 0.0.13 Examples common directory
- 0.0.12 `get otp` data (for real!)
- 0.0.11 `get all toc` info
 - `get otp` data
- 0.0.10 standardized variables for `send/resp`
- 0.0.9 bounds checks for UART prints
- 0.0.8 Added firmware version id
- 0.0.7 [mbed](#) TLS accelerators
- 0.0.6 Added enable / disable debug status
- 0.0.5 Service API error code added
- 0.0.4 Service BOOT reset added
- 0.0.3 RPC Parameter changes
- 0.0.2 First re-factoring
- 0.0.1 Concept + realization - First implementation

SERVICES Library Pairings

SERVICES Version	SES Version	NOTES
0.53.0	1.103.0	
0.52.0	1.102.0	

Known Limitations

A32

A32 bare-metal support is not provided by the ALIF CMSIS packs.

SE-UART Spamming

When using CONTINUOUS mode in the test harness via the SE-UART print SERVICE the amount of print traffic can be very heavy and make the system unresponsive. We recommend you use a local UART (UART 2 or 4) dedicated to the M55_HE or M55_HP. Note that there are mechanisms to stall the spamming within SES.

The SERVICES print capability using the SE-UART was added as a convenience to save having to set up external UARTs.

SE Host Services summary

Service Group		Notes
Maintenance		
	SERVICES_heartbeat	Health status
System Management		
	SERVICES_system_get_toc_data	
	SERVICES_system_get_toc_number	
	SERVICES_system_get_toc_via_name	N/I
	SERVICES_system_get_toc_version	N/I
	SERVICES_system_get_toc_via_cpuid	
	SERVICES_system_get_device_part_number	
	SERVICES_system_get_device_data	
	SERVICES_system_set_services_debug	Debug toggle
	SERVICES_system_get_otp_data	N/I
	SERVICES_system_read_otp	
	SERVICES_get_se_revision	
	SERVICES_system_get_eui_extension	
Application / Pin mux management		
	SERVICES_pinmux	
	SERVICES_padcontrol	
	SERVICES_uart_write	
	SERVICES_application_ospি_write_key	
	SERVICES_SRAM_retention_config	
Power		
	SERVICES_power_stop_mode_request	

	SERVICES_power_ewic_config	
	SERVICES_power_wakeup_config	
	SERVICES_power_mem_retention_config	
	SERVICES_power_m55_he_vtor_save	
	SERVICES_power_m55_hp_vtor_save	
	SERVICES_power_memory_req	
	SERVICES_global_standby_mode	
	SERVICES_get_run_cfg	aiPM
	SERVICES_set_run_cfg	aiPM
	SERVICES_get_off_cfg	aiPM
	SERVICES_set_off_cfg	aiPM
	SERVICES_power_ldo_voltage_control	
	SERVICES_power_dc/dc_voltage_control	
	SERVICES_power_setting_configure	
	SERVICES_power_setting_get	
Security /Crypto		
	SERVICES_cryptocell_get_lcs	
	SERVICES_cryptocell_get_rnd	TRNG
	SERVICES_cryptocell_mbedtls_aes_init	
	SERVICES_cryptocell_mbedtls_aes_set_key	
	SERVICES_cryptocell_mbedtls_aes_crypt	
	SERVICES_cryptocell_mbedtls_sha_starts	
	SERVICES_cryptocell_mbedtls_sha_process	
	SERVICES_cryptocell_mbedtls_sha_update	
	SERVICES_cryptocell_mbedtls_sha_finish	
	SERVICES_cryptocell_mbedtls_ccm_gcm_set_key	
	SERVICES_cryptocell_mbedtls_ccm_gcm_crypt	
	SERVICES_cryptocell_mbedtls_ccm_gcm_chachapoly_crypt	
	SERVICES_cryptocell_mbedtls_ccm_gcm_poly1305_crypt	
	SERVICES_cryptocell_mbedtls_cmac_init_setkey	
	SERVICES_cryptocell_mbedtls_cmac_update	
	SERVICES_cryptocell_mbedtls_cmac_finish	
	SERVICES_cryptocell_mbedtls_cmac_reset	
Boot		
	SERVICES_boot_process_toc_entry	
	SERVICES_boot_cpu	
	SERVICES_set_vtor	
	SERVICES_boot_reset_cpu	
	SERVICES_boot_release_cpu	
	SERVICES_boot_reset_soc	
Clock		
	SERVICES_clocks_select_osc_source	
	SERVICES_clocks_select_pll_source	

	SERVICES_clocks_enable_clock	
	SERVICES_clocks_set_ES0_frequency	
	SERVICES_clocks_set_ES1_frequency	
	SERVICES_clocks_select_a32_source	
	SERVICES_clocks_select_aclk_source	
	SERVICES_clocks_set_divider	
	SERVICES_clocks_get_clocks	
	SERVICES_clocks_get_apb_frequency	
	SERVICES_clocks_get_refclk_frequency	
	SERVICES_pll_initialize	
	SERVICES_pll_deinit	
	SERVICES_pll_xtal_start	
	SERVICES_pll_xtal_stop	
	SERVICES_pll_xtal_is_started	
	SERVICES_pll_clkpll_start	
	SERVICES_pll_clkpll_stop	
	SERVICES_pll_clkpll_is_locked	
Update		
	SERVICES_update_stoc	

SE Host Services Delivery Components

A SERVICES release package from ALIF consists of the following components:

- Source code SERVICES library
 - Public header files
- CMAKE files for ARM Clang and ARM GNU C builds
- Example ports for Bare metal
 - Example SERVICE library initializations.
- Example use cases for M55_HE, M55_HP, A32 and M55_HE+M55_HP
 - Example runs a test program calling all available SERVICES API.
 - Output is sent via the SE-UART to save having to install extra UART debug ports.
- Example use cases for Low Power
 - BASIC tests.

Pre-requisites

The following components are required to be installed before using / building SE SERVICES:

- ALIF Ensemble RTSS Release
 - CMSIS Packs for Ensemble devices
 - Following the installation instructions for this package
- GNU Make V4.4
- Cmake V3.22.2
- Security Toolkit (SETOOLS)
 - Not required for building, but it is required for generating the ATOC packages for the Target and programming them into MRAM.

Building SE Services – Windows / LINUX

Unpack the se-host-services-release-SE_FW_0.<version#>.000_DEV.zip

Name	Date modified	Type	Size
a32_startup	7/11/2023 4:15 PM	File folder	
build	7/7/2023 7:51 AM	File folder	
drivers	7/7/2023 7:51 AM	File folder	
example	7/11/2023 4:15 PM	File folder	
include	7/11/2023 6:01 AM	File folder	
lib	7/7/2023 7:51 AM	File folder	
RTE	7/11/2023 4:15 PM	File folder	
services_lib	7/11/2023 4:15 PM	File folder	
A32_MRAM	7/11/2023 4:15 PM	Windows Script C...	
A32_TCM	7/11/2023 4:15 PM	Windows Script C...	
CMakeLists	7/11/2023 4:15 PM	Text Document	
CMakePresets	7/11/2023 4:15 PM	JSON File	
gcc_A32_MRAM	7/11/2023 4:15 PM	LD File	
gcc_A32_TCM	7/11/2023 4:15 PM	LD File	
gcc_M55_HE_MRAM	7/11/2023 4:15 PM	LD File	
gcc_M55_HE_TCM	7/11/2023 4:15 PM	LD File	
gcc_M55_HP_MRAM	7/11/2023 4:15 PM	LD File	
gcc_M55_HP_TCM	7/11/2023 4:15 PM	LD File	
License	7/7/2023 7:51 AM	Text Document	
M55_HE_MRAM	7/11/2023 4:15 PM	Windows Script C...	
M55_HE_TCM	7/11/2023 4:15 PM	Windows Script C...	
M55_HP_MRAM	7/11/2023 4:15 PM	Windows Script C...	
M55_HP_TCM	7/11/2023 4:15 PM	Windows Script C...	
Makefile_linux	7/7/2023 7:51 AM	File	
README	7/11/2023 4:15 PM	Markdown Source...	
toolchain-armclang	7/11/2023 4:15 PM	CMake Source File	
toolchain-gnu	7/11/2023 4:15 PM	CMake Source File	

The release archive consists of the following target components.

Name	Purpose	Notes
a32_startup	A32 startup code	
Build		
include	Services header files	
lib		
services_lib	Host source code for Services	
example	SERVICES test harnesses	
README.md	instructions	

CMAKE is used.

Building with ARM GNU C

```
$ cd se-host-service-release  
$ mkdir build_he_gcc_tcm  
$ cd build_he_gcc_tcm  
$ cmake .. -G "Unix Makefiles" -DENSEMBLE_CORE=M55_HE -  
DCMAKE_TOOLCHAIN_FILE=toolchain-gnu.cmake  
$ make install  
  
$ cd se-host-service-release  
$ mkdir build_he_power_gcc_tcm  
$ cd build_he_power_gcc_tcm  
$ cmake .. -G "Unix Makefiles" -DENSEMBLE_CORE=M55_HE -  
DCMAKE_TOOLCHAIN_FILE=toolchain-gnu.cmake -DPOWER=ON  
$ make install
```

The SERVICE library is built as part of this builds process.

Building with ARM CLANG

```
$ cd se-host-services-release  
$ mkdir build_he_power_clang_tcm  
$ cd build_he_power_clang_tcm  
$ cmake .. -G "Unix Makefiles" -DENSEMBLE_CORE=M55_HE -DPOWER=ON  
DCMAKE_TOOLCHAIN_FILE=toolchain-armclang.cmake  
$ make install -j 8  
  
$ cd se-host-services-release  
$ mkdir build_he_clang_tcm  
$ cd build_he_clang_tcm  
$ cmake .. -G "Unix Makefiles" -DENSEMBLE_CORE=M55_HE -  
DCMAKE_TOOLCHAIN_FILE=toolchain-armclang.cmake  
$ make install -j 8
```

NOTE: Parallel make (using -j <job#>) is available

SERVICES Library Dependencies

The SERVICES library and support file for starting SERVICES have a few dependencies.

- CMSIS Package installation location
- CMSIS Package source and include locations.

CMSIS Package

The SERVICE example uses the CMSIS startup sequences for booting the Application cores.

CMSIS packages consist of an ARM and ALIF component. The ARM components are specific for the various types of cores. The ALIF components contain specific ALIF Device and Board components.

ALIF CMSIS also provides Global Standby support for Low Power.

JSON Configurations

The examples can be built for the following Application cores:

- M55_HE
- M55_HP
- A32

Sample ATOC JSON files are provided for:

- Code running from MRAM (XIP).
- Code running from TCM memory.
- M55_HE
- M55_HP
- M55_HE + M55_HP

JSON File	TCM	MRAM
services_a32	✓	
services_a32-xip		✓
services_he	✓	
services_he_hp	✓	
services_he_hp_a32	✓	
services_he_hp_a32_xip		✓
services_he_hp_xip	✓	
services_he_xip		✓
services_hp	✓	
services_hp_xip		✓
Services-he-tcm-hp-xip	✓	✓

Power Example

The Power examples demonstrate how to use SERVICES to achieve low power states.

The SERVICES are used to configure the device and enable STOP mode.

Power Example Use Cases

Please refer to the README.md file in the SERVICES release for details of the Example use cases e.g., how to build and run.

BASIC1 (No XIP)

- Keeps device ON after wake up from STOP mode.
- M55_HE is booted on wake up.

BASIC2 (XIP)

- Keeps device ON after wake up from STOP mode.
- M55_HE is booted on wake up.

BASIC3 (No XIP)

- Continually cycles from STOP->WAKE.

BASIC4 (No XIP)

- Example
 - Make a Set RUN Config call, to change the clock settings to something different from the default.
 - Measure the CPU speed, to verify that the above call was executed successfully.
 - Make a Set OFF Config call.
 - Make the PM calls to go OFF. It seems now that is Alif CMSIS functionality.
- Can be configured (built) for continuous or limited run (10) mode.
- **NOTE:** There is an issue when measuring the CPU speeds of both M55s at the same time. It seems it is caused by the shared usage of RTC_A, which is also used for wakeup logic.

BASIC5 (No XIP)

- FASTBOOT with SE not retained.

BASIC6

- Global standby example in TCM.

BASIC7 (No XIP)

- IDLE mode example in TCM

BASIC8 to BASIC13 Clock configuration examples (No XIP)

Each of these examples perform a single aiPM call to set the RUN clock configuration of the device.

- BASIC8 – run the device off the PLL at full CPU frequencies.
- BASIC9 – run the device off the PLL at reduced M55 CPUs frequencies.

BASIC14 GET request examples (No XIP)

- Shows use of the get_off and get_run APIs.

BASIC15 Clock Source Cycling (No XIP)

- Cycles the device between PLL, HFXO and HFRC clock sources.
- Can be continuous or limited to 10 cycles.

BASIC16 M55s run in TCM not retained (No XIP)

- SES loads M55 code from MRAM to its TCM. M55-HE is not retained.
- M55 does a set_run() request
- M55 does a set_off() request
- SES puts the device in STOP mode when both m55s go OFF.
- RTC_A expiry causes wake up.
- PLL not enabled on wake up.
 - Run at RC clock speed 76 MHz.
- SES wakes up.
 - Starts PLL
 - Run at 100 Mhz
 - Initializes m55-he TCM memory.
- SES boots both m55-he and m55-hp from ATOC
 - As both CPUs are booted, you will see the chip cycle.

BASIC17 PD5=OFF and Wake up

- Turn off SES

Power Consumption Examples

A series of examples are provided for various use cases.

- GO_MODES
- READY_MODES
- IDLE_MODES
- STANDBY_MODES
- STOP_MODES
- STANDBY_CYCLE
- STOP_CYCLE

These examples are designed to enable a user to obtain Power numbers like the scenarios described in the Device datasheet.

See README.md file for build details.

NOTE: These examples use very low clock settings. In this case, the SE-UART output may not appear.

SES Power Policies

- Logic added to process ATOC and boot M55_HE and M55_HP in case the M55_HE TCM was not retained.
- SES will apply retention settings as soon as a service request is received because they cannot be applied after a subsystem goes OFF.

Power Example Running – Debugging common issues

ISP Not responding

If you have the device in a Power OFF state, be aware that commands sent from the SETOOLS maintenance command will return '[ERROR] Target not responding' as the device is turned off. ISP is not running / listening on the target when the Power is off.

Cannot use UpdateSystemPackage

- If you have programmed the device to disable the PLL then using Bulk MRAM transfer commands such as UpdateSystemPackage or app-write-mram will probably fail. The reason is that these commands automatically raise the baud rate for ISP which assumes the PLL is enabled. To use these commands

```
$ updatesystempackage -s  
$ app-write-mram -s
```

The -s option suppresses the baud rate increase.

To gain control of the device again you will need to enter Hard Maintenance mode.

PPU Interrupt Spamming

There can be cases where the SE-UART will print a constant stream of PPU interrupt messages as seen below:

```
[SES] es0 ppu_isr=0x80  
[SES] es0 ppu_aisr=0x2  
  
[SES] es0 PPU_PWRP=0x100 PPU_PWSR=0x108  
[SES] es0 ppu_isr=0x80  
[SES] es0 ppu_aisr=0x2  
  
[SES] es0 PPU_PWRP=0x100 PPU_PWSR=0x108  
[SES] es0 ppu_isr=0x80  
[SES] es0 ppu_aisr=0x2  
  
[SES] es0 PPU_PWRP=0x100 PPU_PWSR=0x108  
[SES] es0 ppu_isr=0x80  
[SES] es0 ppu_aisr=0x2  
  
[SES] es0 PPU_PWRP=0x100 PPU_PWSR=0x108  
[SES] es0 ppu_isr=0x80  
[SES] es0 ppu_aisr=0x2  
  
[SES] es0 PPU_PWRP=0x100 PPU_PWSR=0x108  
[SES] es0 ppu_isr=0x80  
[SES] es0 ppu_aisr=0x2
```

This can be caused by incorrect configuration of aiPM settings such as running your code from XIP (i.e. MRAM) but asking aiPM to disable the Power to MRAM.

SES will print a maximum of 50 of these messages and stop printing them. You should use Hard Maintenance mode to gain control of the Device and remove your Application code from MRAM.

Power Examples Limitations

- Wakeup timers that expire before you enter STOP mode.
 - You will not enter stop mode.
- The booting of specific CPU core as per requested wake up event is not yet supported.
 - On any configured wake up event the m55-he is booted if its TCM is retained or ATOC is processed, and bootable images are booted (potentially both m55-he and m55-hp if the ATOC has bootable images for both)
- Some tests may not report on the SE-UART as the clock rates are too low.

SES Clock Policies

- SES COLD Boot
 - SES checks for presence of Application Conductor objects specifying Clock directions.
 - If no DCT object is present, SES will set the LF Clock Source to the LFXO (Default)

SERVICES test harness example

A test harness example is provided showing calls to all the SERVICES APIs.

See `example\common\services_test.c`.

There are numerous build options available. Not all tests can be run at once as they either do not return or they reboot the system.

Examples customization options.

Output of the results from the example test can be via the ARM-DS Console or the SE-UART.

In `services_test.c` there are the following defines

<code>#define TEST_PRINT_ENABLE</code>	1 /* Enable printing from Test harness */
<code>#define PRINT_VIA_CONSOLE</code>	0 /* Print via Debugger console */
<code>#define PRINT_VIA_SE_UART</code>	1 /* Print via SE UART terminal */

Flag	Meaning
<code>TEST_PRINT_ENABLE</code>	Turn on output from the test
<code>PRINT_VIA_CONSOLE</code>	Print messages to arm-ds (<code>printf()</code>)
<code>PRINT_VIA_SE_UART</code>	Print messages to the SE-UART

You can enable both Console and SE-UART.

If you want to run the test from MRAM the `PRINT_VIA_CONSOLE` must be disabled.

Changing CMSIS Packs

The SERVICES examples use ALIF CMSIS mainly for:

- M55_HE and HP startup sequences.
- MHU interrupt vectors and numbers
- Global Standy APIs for Low Power example

The SERVICES examples build defaults to the latest ALIF CMSIS Packs.

Changing CMSIS versions is as follows:

```
$ cmake .. -G "Unix Makefiles" -DENSEMBLE_CORE=M55_HE -
DCMAKE_TOOLCHAIN_FILE=toolchain-armclang.cmake -Dalifcmsis="0.9.3"
```

Building and running the Examples

Please see README.md supplied in the SERVICES examples.

Building the M55 HE Example - run from TCM.

There are two json files supplied in the Services release:

- services-he.json
 - Single Core
- services-he-hp.json
 - Dual Core

Follow the instructions to build the M55_HE or HP example.

```
$ cd <host-release directory>
$ mkdir build_he
$ cd build_he
$ cmake .. -G "Unix Makefiles" -DENSEMBLE_CORE=M55_HE -
DCMAKE_TOOLCHAIN_FILE=toolchain-armclang.cmake
$ make install
```

To boot M55_HE application CPUs you need these steps:

```
$ cd <release directory>/app-release-exec
$ ./app-gen-toc -f build/config/service-he.json
$ ./app-write-mram
```

Building the M55 HE Example - run from MRAM.

There are two json files supplied in the Services release:

- services-he-xip.json
 - Single Core
- services-he-hp-xip.json
 - Dual Core

Follow the instructions to build the M55_HE or HP example.

```
$ cd <host-release directory>
$ mkdir build_he_mram
$ cd build_he_mram
$ cmake .. -G "Unix Makefiles" -DENSEMBLE_CORE=M55_HE -
DCMAKE_TOOLCHAIN_FILE=toolchain-armclang.cmake -DXIP=1
$ make install
```

To boot M55_HE application CPU you need these steps:

```
$ cd <release directory>/app-release-exec  
$ ./app-gen-toc -f build/config/service-he-xip.json  
$ ./app-write-mram
```

Building and running the M55_HE Power Example (ARM Clang)

```
$ cd se-host-service-release  
$ mkdir build_he_power  
$ cd build_he_power  
$ cmake .. -G "Unix Makefiles" -DENSEMBLE_CORE=M55_HE -  
DCMAKE_TOOLCHAIN_FILE=toolchain-armclang.cmake -DPOWER=ON  
$ make install  
  
$ cd ../app-release-exec  
$ ./app-gen-toc -f build/config/service-he.json  
$ ./app-write-mram
```

Building and running the M55_HE Power Example (ARM GNUC)

```
$ cd se-host-service-release  
$ mkdir build_he_power  
$ cd build_he_power  
$ cmake .. -G "Unix Makefiles" -DENSEMBLE_CORE=M55_HE -  
DCMAKE_TOOLCHAIN_FILE=toolchain-gnu.cmake -DPOWER=ON  
$ make install  
  
$ cd ../app-release-exec  
$ ./app-gen-toc -f build/config/service-he.json  
$ ./app-write-mram
```

Building and running the M55_HP Power Example (ARM Clang)

```
$ cd se-host-service-release  
$ mkdir build_hp_power  
$ cd build_hp_power  
$ cmake .. -G "Unix Makefiles" -DENSEMBLE_CORE=M55_HP -  
DCMAKE_TOOLCHAIN_FILE=toolchain-armclang.cmake -DPOWER=ON  
$ make install  
  
$ cd ../app-release-exec  
$ ./app-gen-toc -f build/config/service-hp.json  
$ ./app-write-mram
```

Building and running the M55_HP Power Example (ARM GNUC)

```
$ cd se-host-service-release  
$ mkdir build_hp_power  
$ cd build_hp_power
```

```
$ cmake .. -G "Unix Makefiles" -DENSEMBLE_CORE=M55_HP -
DCMAKE_TOOLCHAIN_FILE=toolchain-gnu.cmake -DPOWER=ON
$ make install
```

```
$ cd ../app-release-exec
$ ./app-gen-toc -f build/config/service-hp.json
$ ./app-write-mram
```

Building and running the STOC update example

```
$ cd se-host-service-release
$ mkdir stoc_update
$ cd stoc_update
$ cmake .. -G "Unix Makefiles" -DENSEMBLE_CORE=M55_HE -
DCMAKE_TOOLCHAIN_FILE=toolchain-gnu.cmake -DEXAMPLE=UPDATE_STOC
$ make install
$ cd <app-release-dir>
$ <copy the STOC update package to build/images/STOC.bin>
$ app-gen-toc -f build/config/services-he-update-stoc.json
$ app-write-mram
```

This example shows how to update the ALIF STOC contents.

It requires an ALIF specific binary (Called an Update Package) to be passed as data to a SERVICE call which will update this image in ALIF MRAM area.

This example adds this update binary to an ATOC image so it can be loaded from MRAM into RAM for the test. In a real system this image would arrive from your OTA source.

Building SE Host Services – LINUX

Unpack the se-host-services-release-SE_FW_0.<version#>.000_DEV.zip

There is a separate makefile file for building the Services library for Linux - ‘Makefile_linux’, so that file should be used instead of the default ‘Makefile’ –

```
$ make -f Makefile_linux lib
```

By default, things are set up to use the native GCC compiler in Cygwin.

To use the Alif Yocto cross compiler toolchain and generate binaries for the Alif Linux distribution, a couple of changes are needed.

- comment out the compiler definitions (like ‘CC = gcc’) in Makefile_linux. The Yocto toolchain provides its own definitions.
- modify the file services_lib\services_host_handler_linux.c and replace ‘#if 0’ with ‘#if 1’, to include the Linux kernel header file for the MHU driver.

Installing examples

The examples come with supplied JSON files for A32, M55_HE and M55_HP processors including variants for MRAM (XIP) and TCM running.

There is an option to install these examples into your Application Release to enable building an ATOC for putting into MRAM. To build the ATOC you need the JSON file and the binary image for Application. These files are copied from the se-host-services-release into your application release.

```
$ cd se-host-services-release
```

Note the use of the `INSTALL_DIR` to specify where your application release lives.

When you unpack your application release you will get a directory structure as follows:

```
app-release-exec-windows-SE-FW_0.<version>
  + app-release-exec
    + build
      + config
      + images
```

The JSON files will be copied to the config directory and the binaries will be copied to images. This is where the ATOC generation tools will look.

A sample sequence would be as follows:

```
$ cd se-host-services-release
$ mkdir build_he
$ cd build_he
$ cmake .. -G "Unix Makefiles" -DENSEMBLE_CORE=M55_HE -
DCMAKE_TOOLCHAIN_FILE=toolchain-armclang.cmake
$ make install -j 8
```

Installing examples to a different location

An example of using the `INSTALL_DIR` is as follows:

```
-DINSTALL_DIR=<some path>
```

If you do not specify the `INSTALL_DIR` then the default is `app-release-exec`

Use the following to override the default:

```
$ cd se-host-services-release
$ mkdir build_he
$ cd build_he
$ cmake .. -G "Unix Makefiles" -DENSEMBLE_CORE=M55_HE -
DCMAKE_TOOLCHAIN_FILE=toolchain-armclang.cmake -DINSTALL_DIR=<some
location>
$ make install -j 8
```

```
$ cmake .. -G "Unix Makefiles" -DENSEMBLE_CORE=M55_HE -DCMAKE_TOOLCHAIN_FILE=toolchain-armclang.cmake -DINSTALL_DIR=../junk  
-- [INFO] Version=9  
-- [INFO] installation override, using ../junk  
-- The C compiler identification is ARMClang 6.18.2  
-- The CXX compiler identification is ARMClang 6.18.2  
-- The ASM compiler identification is ARMClang
```

A message shows that installation override is enabled.

The default directory is app-release-exec which is the one used on Windows. LINUX release will have the directory name app-release-exec-linux which you would need to specify using the INSTALL_DIR option (or simply rename the app-release-exec-linux directory to app-release-exec).

Running with SERVICES Debug disabled

The test harness has a call to SERVICES_system_set_services_debug() which can disable or enable the debug traffic from SES for the SERVICE traffic.

With the SERVICES debug set to false:


```
[SES] CM0+ frequency is 100 MHz
[SES] os Kernel V10.4.2
[SES] Main Task - looping forever
[SRU] RX<-- SID= 0x0CE, Receiver ID=4, Address=0x9083FFA8
[ITV] SERVICES version 0.0.6
[ITV] ** TEST heartbeat error_code=SERVICES_REQ_SUCCESS
[ITV] ** TEST pinmux error_code=SERVICES_REQ_SUCCESS
[ITV] ** TEST padcontrol error_code=SERVICES_REQ_SUCCESS
[ITV] ** TEST crypto TRNG 64 error_code=SERVICES_REQ_SUCCESS
[ITV] ** TEST crypto TRNG 32 error_code=SERVICES_REQ_SUCCESS
[ITV] ** TEST crypto TRNG 64 error_code=SERVICES_REQ_SUCCESS
[ITV] ** TEST crypto TRNG 32 error_code=SERVICES_REQ_SUCCESS
[ITV] ** TEST crypto LCS error_code=SERVICES_REQ_SUCCESS
[ITV] ** TEST get ATOC error_code=SERVICES_REQ_SUCCESS
[ITV] ** TEST TOC via name HE error_code=SERVICES_REQ_SUCCESS
[ITV] ** TEST TOC via name HP error_code=SERVICES_REQ_SUCCESS
[ITV] ** TEST TOC via cpuid error_code=SERVICES_REQ_SUCCESS
[ITV] ** TEST TOC via cpuid error_code=SERVICES_REQ_SUCCESS
[ITV] ** TEST soc id error_code=SERVICES_REQ_SUCCESS
[ITV] ** TEST Boot TOC A32 error_code=SERVICES_REQ_SUCCESS
[ITV] service_resp=0x00000000
[ITV] service_resp=0x00000000
[ITV] 64-bit Random value = 0xicfed9edc1501c20 service_resp=0
[ITV] 32-bit Random value = 0xa479c8ff service_resp=0
[ITV] 64-bit Random value = 0xbc3fcf15f8479420 service_resp=0
[ITV] 32-bit Random value = 0x5cfbb90c service_resp=0
[ITV] LCS State 0x0 service_resp=0
[ITV] Application TOC number = 0 service_resp=0x00000000
[ITV] service_resp=0x00000000
[ITV] service_resp=0x00000000
[ITV] id HE DBG flags 63 1 0 0 service_resp=0x00000000
[ITV] id HE DBG Flags 63 1 0 0 service_resp=0x00000000
[ITV] Device number 0xA100 service_resp=0x00000000
[ITV] service_resp=0x00000000
```

The SERVICE call to set the debug output off can be seen (the default is enabled in SES). After that, there is no SERVICE debug traffic from SES.

Building the M55 Host Example under ARM-DS

Before starting, ensure you have the ALIF Semiconductor CMSIS Pack installed (See [AP002 Getting Started with Bare Metal & Azure RTOS](#))


- Create a new Project -> C Project -> CMSIS C/C++ Project
- Select Device -> Alif Semiconductor -> Ensemble -> E7 -> AE722F80F55D5AE (or the other one) -> AE722F80F55AE:M55_HE
- In the Project Components window,
 - Check the following highlighted boxes,
 - Then File -> Save

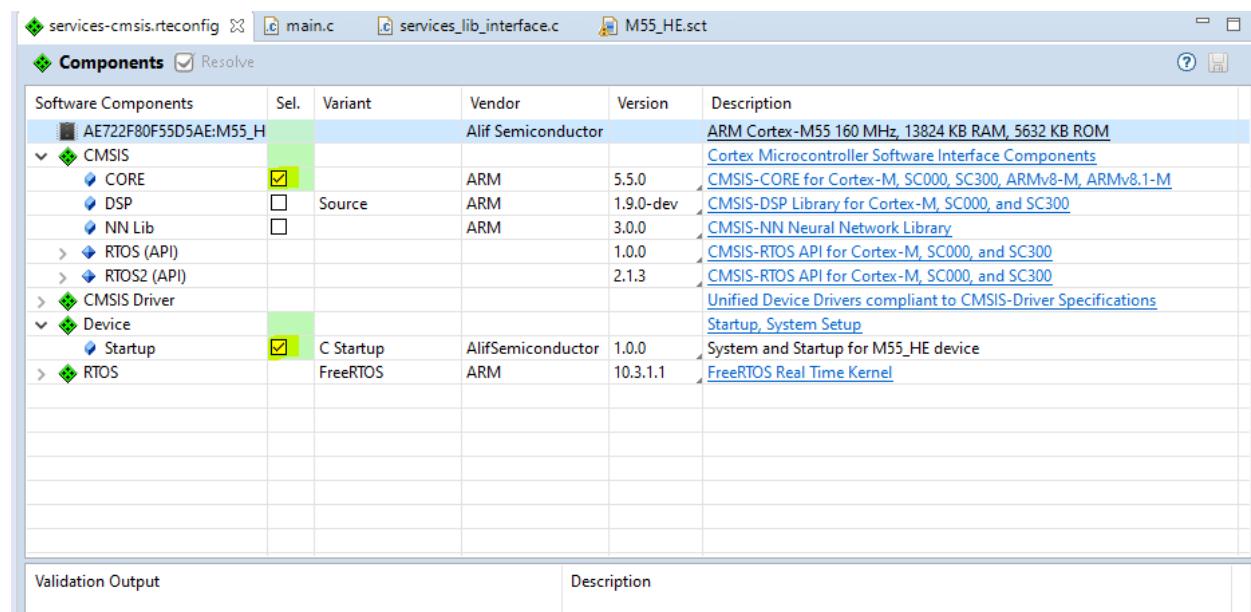

The screenshot shows the 'Components' tab of the Project Components window in ARM-DS. The table lists software components with their selection status ('Sel.'), variant, vendor, version, and description.

Software Components	Sel.	Variant	Vendor	Version	Description
AE722F80F55D5AE:M55_H			Alif Semiconductor		ARM Cortex-M55 160 MHz, 13824 KB RAM, 5632 KB ROM
CMSIS					Cortex Microcontroller Software Interface Components
CORE	<input checked="" type="checkbox"/>		ARM	5.5.0	CMSIS-CORE for Cortex-M, SC000, SC300, ARMv8-M, ARMv8.1-M
DSP	<input type="checkbox"/>	Source	ARM	1.9.0-dev	CMSIS-DSP Library for Cortex-M, SC000, and SC300
NN Lib	<input type="checkbox"/>		ARM	3.0.0	CMSIS-NN Neural Network Library
RTOS (API)				1.0.0	CMSIS-RTOS API for Cortex-M, SC000, and SC300
RTOS2 (API)				2.1.3	CMSIS-RTOS API for Cortex-M, SC000, and SC300
CMSIS Driver					Unified Device Drivers compliant to CMSIS-Driver Specifications
Device					Startup, System Setup
Startup	<input checked="" type="checkbox"/>	C Startup	Alif Semiconductor	1.0.0	System and Startup for M55_HE device
RTOS		FreeRTOS	ARM	10.3.1.1	FreeRTOS Real Time Kernel

Select the SE Services

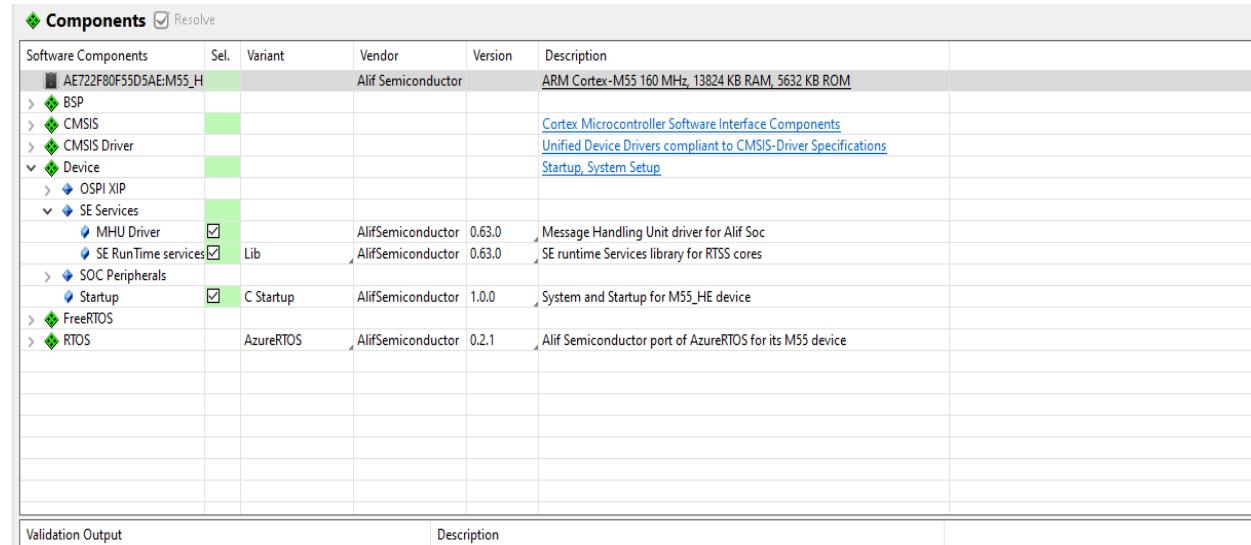

The screenshot shows the 'Components' tab of the Project Components window in ARM-DS. The table lists software components with their selection status ('Sel.'), variant, vendor, version, and description.

Software Components	Sel.	Variant	Vendor	Version	Description
AE722F80F55D5AE:M55_H			Alif Semiconductor		ARM Cortex-M55 160 MHz, 13824 KB RAM, 5632 KB ROM
BSP					Cortex Microcontroller Software Interface Components
CMSIS					Unified Device Drivers compliant to CMSIS-Driver Specifications
Device					Startup, System Setup
OSPI XIP					
SE Services					
MHU Driver	<input checked="" type="checkbox"/>		Alif Semiconductor	0.63.0	Message Handling Unit driver for Alif Soc
SE RunTime services	<input checked="" type="checkbox"/>	Lib	Alif Semiconductor	0.63.0	SE runtime Services library for RTSS cores
SOC Peripherals					
Startup	<input checked="" type="checkbox"/>	C Startup	Alif Semiconductor	1.0.0	System and Startup for M55_HE device
FreeRTOS					
RTOS		AzureRTOS	Alif Semiconductor	0.2.1	Alif Semiconductor port of AzureRTOS for its M55 device

Adding ALIF SE SERVICES to your Application code

Calling SERVICES from your Application requires the following:

- Include the header files:
 - /service-release/include/services_lib_api.h
 - /service-release/include/aipm.h
- Link with
 - /service-release/lib/libservices_m55_lib.a (or _a32_)
 - /service-release/lib/libmhu_m55_lib.a (or _a32_)
- Copy or create your own service_lib_interface.c file and add it to your build.
 - Change any interrupt sources as required.
 - Implement wait function for your environment.
 - Implement print function for your environment.

SE Host Services Library API

The Host Service API is built on a transport protocol layer. This is to facilitate changing the underlying protocol without affecting the rest of the library.

The services library package consists of the following:

Component	Description
libservices_m55_lib.a	Host Services M55 Library
libservices_a32_lib.a	Host Services A32 Library
libmhu_m55_lib.a	Host Services M55 MHU Library (Baremetal)
services_lib_api.h	APIs to access the services library
services_lib_interface.c	To be completed by the user. Compiled with the host CPU application program

There is a porting / abstraction interface component which the user must update depending upon their operating system choice and driver interface to the Message Handling hardware (MHU).

ALIF supply completed interfaces (currently) for

- Bare metal
- FreeRTOS
- ThreadX
- Linux

The Host services library provides APIs to facilitate service requests from a host CPU to the SE. It must be set up and initialized before dispatching a Host service request to the SE. It needs access to the MHU driver functions to facilitate MHU communication.

The Host services library also requires other generic functions:

SERVICES_wait_ms(uint32_t wait_time_ms)	Delay function
SERVICES_send_mhu_message_to_se(uint32_t message)	Interface to the MHU driver

This layer is intended for any Operating System abstraction.

Host Services Library Interface API Porting Layer

This needs to be updated by the user depending upon the operating system being used (or base metal) and the interface to the Message handling hardware. The requirements of the operating system are very light.

The file `services_lib_interface.c` is the porting interface which needs to be filled in by the user.

SERVICES_wait_ms

```
// Delay function
int wait_ms(uint32_t wait_time_ms)
```

SERVICES_send_mhu_message_to_se

```
// MHU send message to SE on MHU0 channel0
int send_mhu_message_to_se(uint32_t message)
```

The above functions must be configured in `services_init_params` structure and pass to the service library initialization function below.

Host Services Library API Layer

A Service call from an application processor looks like any other C function call, it can take parameters and return results via pass by reference parameters.

The Host Services library is responsible for taking the application Service call and communicating this to the Secure Enclave using the MHU.

SERVICES_initialize

The SERVICES library needs to be initialized before use. There are several parameters that are needed by the SERVICES library such as which MHU is being used, packet buffers etc.

Please refer to the SE Host Services API section for more details.

```
// Service library initialization
void SERVICES_initialize(services_lib_t *init_params)

SERVICES_initialize(services_lib_t *init_params);

// Service synchronization
int SERVICES_synchronize_with_se(uint32_t services_handle)

number_of_retries = SERVICES_synchronize_with_se(services_handle);
```

The M55-HE and M55-HP are started before SERAM is ready to process service calls. This function sends heartbeat requests until one of them succeeds. It returns the number of retries. The maximum number of retries is 100.

SERVICES_send_request

```
// Service request call
uint32_t SERVICES_send_request(uint32_t services_handle,
                               uint16_t service_id,
                               uint32_t service_timeout);

Error_code = SERVICES_send_request(handle, SERVICE_HEARTBEAT_ID,
DEFAULT_TIMEOUT);
```

The service request dispatches the service request to the SE. Service calls are synchronous, the function waits for the SE to send a response back and then returns an error code. This is analogous to a remote procedure call. The caller can specify the desired timeout for the service call, or specify DEFAULT_TIMEOUT, in which case the timeout specified when during Services library setup is used. It needs access to the host CPUs MHU driver functions to send, receive and ACK messages over the MHU.

SERVICES_send_msg_acked_callback

```
// MHU message ACK callback function
void SERVICES_send_msg_acked_callback(void)
```

The above callback function must be passed to the MHU driver during initialization. It is called by the driver when an MHU message is ACKed by the SE. Channel clear interrupt CH_INT_ST is set when SE has received the MHU message and SE clears the channel status CH_ST bits by setting CH_CLR. This is assumed to be an ACK from SE that it has received an MHU message sent by the host CPU.

SERVICES_rx_msg_callback

```
// MHU message received callback function
void SERVICES_rx_msg_callback(uint32_t message);
```


The above callback function must be passed to the MHU driver during initialization. It is called by the driver when an MHU message is received from the SE as a response to a service request earlier to the SE

```
// Pinmux service
int PINMUX_config(Port_t port_num, Pin_t pin_num, Pinfunction_t
function);
```

SE Host SERVICES Library

SE Host SERVICES Library - Anatomy of a SERVICE Call

A SERVICES API call takes the following format:

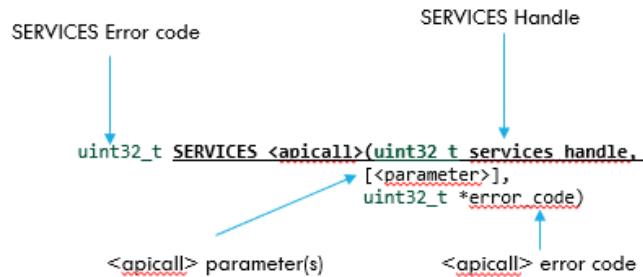

- SERVICES API are regular function calls taking the format SERVICES_<module>
- Returns Services error code.
 - This relates to the SERVICES transport layer.
- Other return values are passed in the function prototype.
 - These parameters can be IN and OUT and can be variable sized.
 - Results from the SERVICE call are returned via these variables.
 - The error_code return relates to the error returned from the actual SERVICE call.

SE Host Service Library Internal implementation

Each SERVICE defines a unique parameter block structure.

- See example_service_t in the diagram below.
- This always contains the Header and a return response error code,
- There may be passed parameters from the Caller.
- There may be return parameters to the Caller.

For each SERVICE call processed in SERAM the parameter block is dereferenced

- Sent parameters can be passed to the calling function.
- The Error code from the called function will be sent back as part of the parameter block.

```

typedef struct
{
  service_header_t header;
  volatile uint32_t send_<param>;      /*!< Send parameter */
  volatile uint32_t resp_<param>;       /*!< Return parameter */
  volatile uint32_t resp_error_code;     /*!< Call error code */
} example_service_t;

void SERVICES example_call(services_req_t *service)
{
  example_service_t *p_svc =
    (example_service_t *)service->pkt_buffer_address; /* services request */
  uint32_t error_code;
  uint32_t local_result;

  error_code = function_call(p_svc->send_<param>, &local_result);

  p_svc->resp_<param> = local_result;
  p_svc->resp_error_code = error_code;


  SERVICES_send_response_code(service, SERVICES_REQ_SUCCESS);
}

```

There is no copying of data between the Host Application CPU and the Secure enclave.

SE Host Service Library Transport Protocol details

The transport protocol is as follows:

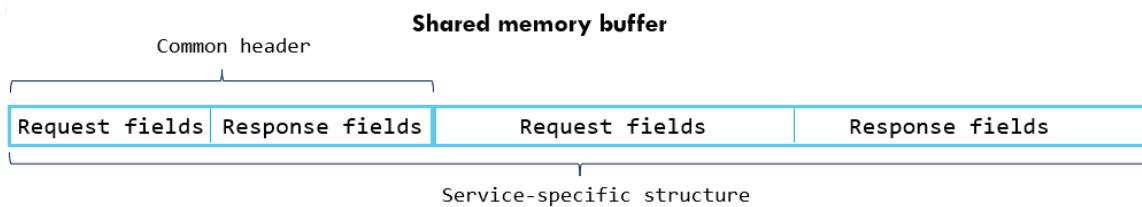

Common header format

Service ID: req
Flags: req
Error Code: resp
Padding

Service-specific structure example

```

typedef struct
{
  service_header_t header;
  uint8_t send_port_num;
  uint8_t send_pin_num;
  uint8_t send_config_data;
  uint8_t resp_error_code; // service-specific
  error code
} pinmux_svc_t;

```

SE Host Service Library Transport Error Codes

The following are the valid return and Error codes for the services library.

Error Code	Value	Meaning
SERVICES_REQ_SUCCESS	0x00	
SERVICES_REQ_NOT_ACKNOWLEDGE	0xFF	
SERVICES_REQ_TIMEOUT	0xFD	
SERVICES_REQ_UNKNOWN_COMMAND	0xFC	

This error relates to any operation on the transport layer of the SERVICES library. Most SERVICES library APIs have a second error code which is the error code return from the called function.

SE Host Services Library Error Handling

There are two levels of Error with a SERVICES API call,

- SERVICES Transport layer error code
- Function call error code

Valid SERVICE Error and return codes are:

```
#define SERVICES_REQ_SUCCESS          0x00
#define SERVICES_REQ_NOT_ACKNOWLEDGE   0xFF
#define SERVICES_REQ_TIMEOUT           0xFD
#define SERVICES_RESP_UNKNOWN_COMMAND  0xFC
#define SERVICE_SUCCESS                0x0
#define SERVICE_FAIL                  0x200
#define SERVICE_INVALID_PARAMETER      0x201
```

SE Host Services Library Memory handling

When passing data from the Application CPUs, the SERVICES library will perform all necessary address translations and handling.

LocalToGlobal() is used inside the SERVICE Library to pass the correct addresses to the SECURE Enclave.

SE Host Services API

The services provided by the SE via the MHU are as follows.

Miscellaneous

SERVICES_Initialize

Syntax:

```
uint32_t SERVICES_initialize(services_lib_t * init_params)
```

Description:

Initialize the services library.

A user needs to supply the following platform specific data and functions for the following operations.

- Global address of the CPU's local data memory 0x0 for A32, start of DTCMs for the M55 cores.
- Packet buffer
 - Defined in Application memory space.
 - Used by the SERVICES library.
- Send MHU message function – provided by the MHU driver.
- wait (delay) function – platform and OS specific.
- print function – platform and OS specific.

The examples source contains service_lib_interface.c which shows how to set up the SERVICES library. This is not part of the SERVICES Library code as it is expected to be customized by a User for their application, which is why this is included as source code in the examples.

Parameters:

init_params Initialization parameters

Returns:

Restrictions:

None

Example:

```
#include "services_lib_api.h" /* services_lib_t lives here */  
  
static uint8_t  
s_packet_buffer[SERVICES_MAX_PACKET_BUFFER_SIZE] __attribute__ ((aligned (4)));  
  
int SERVICES_print(const char * fmt, ...)  
{  
    /* To be filled in by the user */  
  
    return 0;  
}
```

```
int32_t SERVICES_wait_ms(uint32_t wait_time_ms)
{
    /* To be filled in by the user */

    return 0;
}

int main (void)
{
    uint32_t ErrorCode = SERVICES_OK;

    services_lib_t services_init_params =
    {
        .global_offset          = DTCM_GLOBAL_ADDRESS - M55_DTCM_LOCAL_OFFSET,
        .packet_buffer_address = (uint32_t)s_packet_buffer,
        .fn_send_mhu_message   = send_message,
        .fn_wait_ms             = &SERVICES_wait_ms,
        .wait_timeout           = timeout,
        .fn_print_msg           = &SERVICES_print,
    };

    ErrorCode = SERVICES_initialize(&services_init_params);

    if (ErrorCode != SERVICES_REQ_SUCCESS)
    {
        return ErrorCode;
    }
}
```

SERVICES_version

Syntax:

```
const char *SERVICES_version(void)
```

Description:

Returns the version of the Host library.

Parameters:

None

Returns:

Version string

Restrictions:

None

Example:

```
#include <services_lib_api.h>

int main (void)
{
    uint32_t ErrorCode = SERVICES_OK;

    printf("SERVICES version %s\n", SERVICES_version());
}
```

SERVICES_register_channel

Syntax:

```
uint32_t SERVICES_register_channel(uint32_t mhu_id, uint32_t channel_number);
```

Description:

Returns a handle for a specific MHU and channel, to be used in subsequent service calls.

Parameters:

mhu_id	MHU ID
channel_number	Channel number (within the MHU)

Returns:

Service channel handle

Restrictions:

The MHU ID and channel number must be valid.

The maximum number of MHU Channels is 124.

Example:

```
#include <services_lib_api.h>

#define NUM_MHU          2
#define MHU_M55_SE_MHU0   0
#define MHU_M55_SE_MHU1   1

int main (void)
{
    mhu_initialize();
    SERVICES_Setup(s_mhu_driver_out.send_message, MAXIMUM_TIMEOUT);

    uint32_t services_handle = SERVICES_register_channel(MHU_M55_SE_MHU0, 0);

    printf("SERVICES handle %d\n", services_handle);
}
```

SERVICES_prepare_packet_buffer

Syntax:

```
uintptr_t SERVICES_prepare_packet_buffer(uint32_t size)
```

Description:

Prepares a packet buffer.

Used by the SERVICES library to allocate a packet buffer from the global Packet buffer memory.

Parameters:

Size	Packet buffer size
------	--------------------

Returns:

Pointer to packet buffer.

Restrictions:**Example:**

Maintenance Services

The maintenance services provide a mechanism to maintain a reliable connection between the sender and receiver and/or request general information from the receiver. The following maintenance services are supported by SE.

SERVICES_heartbeat

Syntax:

```
uint32_t SERVICES_heartbeat (uint32_t services_handle)
```

Description:

Heartbeat request.

This service is analogous to “ping”.

It is a message sent by the sender to tell the receiver that it is alive. It can also be sent by SE to check if another core is alive and responding. When this message is ACKed by the receiver, the sender knows that the receiver is alive. This message does not warrant a response from the receiver other than ACK.

Parameters:

services_handle

Returns:

Restrictions:

None

Example:

```
int main (void)
{
    uint32_t ErrorCode = SERVICES_OK;

    mhu_initialize();
    SERVICES_Setup(s_mhu_driver_out.send_message, MAXIMUM_TIMEOUT);

    //SERVICES_wait_ms(0x1000000);

    uint32_t services_handle = SERVICES_register_channel(MHU_M55_SE_MHU0, 0);

    ErrorCode = SERVICES_heartbeat(services_handle);
    if (ErrorCode != SERVICES_REQ_SUCCESS)
    {
        return ErrorCode;
    }

    return ErrorCode;
}
```

SERVICES_synchronize_with_se

Syntax:

```
int SERVICES_synchronize_with_se(uint32_t services_handle)
```

Description:

Wait for the SE to become available. In some warm boot cases the M55_HE is released by SES and so is running, this means the M55 is running before SES has fully completed booting and installing the MUU handlers. In this case the M55_HE needs to synchronize (wait) for SES to be ready.

This function is built on top of SERVICES_heartbeat. A heartbeat call is made (for a maximum of 100 times) until SES responds. If SES responds this function will return an integer number which is the number of retries it made until it got a response. If SES does not respond then a negative number will be returned indicating this call failed.

Parameters:

services_handle

Returns:

Restrictions:

None

Example:

```
int main (void)
{
    int retry_count;

    /* keep sending heartbeat services requests until one succeeds */
    retry_count = SERVICES_synchronize_with_se(services_handle);

}
```

System Management

SERVICES_system_set_services_debug

Syntax:

```
uint32_t SERVICES_system_set_services_debug (uint32_t services_handle,  
                                         bool debug_enable,  
                                         uint32_t *error_code)
```

Description:

Enable / Disable Service debug traffic from SES.

Parameters:

service_handle	Service Handle
debug_enable	Toggle debug output.
error_code	Service Error Code

Returns:**Restrictions:**

None

Example:

```
int main (void)  
{  
    uint32_t service_error_code;  
  
    SERVICES_system_set_services_debug(services_handle,  
                                       false,/* False = NO debug output */  
                                       &service_error_code);  
    if (service_error_code != SERVICES_REQ_SUCCESS)  
    {  
        /* Deal with error */  
    }  
}
```

SERVICES_system_read_otp**Syntax:**

```
uint32_t SERVICES_system_read_otp( uint32_t services_handle,  
                                  uint32_t otp_offset,  
                                  uint32_t *otp_value_word,  
                                  uint32_t *error_code)
```

Description:

Read an OTP offset.

Parameters:

service_handle	Service Handle
otp_offset	OTP word offset to read.
otp_value_word	OTP value at otp_offset
error_code	Service Error Code

Returns:

SERVICE_SUCCESS or SERVICE_FAIL

Restrictions:**Example:**

```
int main (void)  
{  
    uint32_t ErrorCode = SERVICES_REQ_SUCCESS  
    uint32_t service_error_code;  
    uint32_t otp_value;  
  
    ErrorCode = SERVICES_system_read_otp(services_handle,  
                                         0x51, /* Offset */  
                                         &otp_value,  
                                         &service_error_code);  
    if (ErrorCode != SERVICES_REQ_SUCCESS)  
    {  
        return ErrorCode;  
    }  
}
```

SERVICES_system_write_otp

Syntax:

```
uint32_t SERVICES_system_write_otp (uint32_t services_handle,  
                                  uint32_t otp_offset,  
                                  uint32_t otp_value_word,  
                                  uint32_t *error_code)
```

Description:

Write an OTP offset.

Parameters:

service_handle	Service Handle
otp_offset	OTP word offset to write.
otp_value_word	OTP value to write to otp_offset
error_code	Service Error Code

Returns:

SERVICE_SUCCESS or SERVICE_FAIL

SERVICES_system_get_otp_data

Syntax:

```
uint32_t SERVICES_system_get_otp_data (uint32_t services_handle,  
                                       SERVICES_otp_data_t *otp_info,  
                                       uint32_t * error_code)
```

Description:

Returns details of OTP data

Parameters:

service_handle	Service Handle
otp_info	Details of OTP contents
error_code	Service Error Code

Returns:

Restrictions:

Example:

```
int main (void)
```

```
{
  uint32_t ErrorCode = SERVICES_OK;
  uint32_t service_error_code;
  SERVICES_otp_data_t otp_info;

  ErrorCode = SERVICES_system_get_otp_data(services_handle,
                                            &otp_info,
                                            &service_error_code);
  if (ErrorCode != SERVICES_REQ_SUCCESS)
  {
    return ErrorCode;
  }
}
```

SERVICES_system_get_toc_data

Syntax:

```
uint32_t SERVICES_system_get_toc_data (uint32_t services_handle,
                                         SERVICES_toc_data_t *toc_info,
                                         uint32_t * error_code)
```

Description:

Returns details of TOC objects in MRAM.

```
typedef struct {
  uint8_t image_identifier[TOC_NAME_LENGTH]; /*!< TOC name */
  uint32_t version; /*!< TOC Version */
  uint32_t cpu; /*!< TOC Cpu ID */
  uint32_t store_address; /*!< TOC MRAM address */
  uint32_t load_address; /*!< TOC load */
  uint32_t boot_address; /*!< TOC boot address */
  uint32_t image_size; /*!< TOC image size */
  uint32_t processing_time; /*!< TOC process time */
  uint32_t flags; /*!< TOC flag state */
  uint8_t flags_string[FLAG_STRING_SIZE]; /*!< TOC flag string */
} SERVICES_toc_info_t;

/**
 * @struct SERVICES_toc_data_t
 */
typedef struct
{
  uint32_t number_of_toc_entries;
  SERVICES_toc_info_t toc_entry[SERVICES_NUMBER_OF_TOC_ENTRIES];
} SERVICES_toc_data_t;
```

The number of TOC entries found is returned followed by the TOC entry details.
SERVICES_NUMBER_OF_TOC_ENTRIES is set to 15 entries.

Parameters:

service_handle	Service Handle
toc_info	Details for all TOCs found
error_code	Service Error Code

Returns:**Restrictions:**

None

Example:

```
int main (void)
{
    uint32_t ErrorCode = SERVICES_OK;
    uint32_t service_error_code;
    SERVICES_toc_data_t toc_info;

    ErrorCode = SERVICES_system_get_toc_data(services_handle,
                                              &toc_info,
                                              &service_error_code);

    if (ErrorCode != SERVICES_REQ_SUCCESS)
    {
        return ErrorCode;
    }
}
```

SERVICES_system_get_toc_number

Syntax:

```
uint32_t SERVICES_system_get_toc_number(uint32_t services_handle,  
                                         uint32_t *toc_number,  
                                         uint32_t * error_code)
```

Description:

Returns the number of Table of contents in MRAM

Parameters:

service_handle	Service Handle
toc_number	Number of TOCs
error_code	Service Error Code

Returns:**Restrictions:**

None

Example:

```
int main (void)  
{  
    uint32_t ErrorCode = SERVICES_OK;  
    uint32_t number_of_tocs;  
    uint32_t service_error_code;  
  
    ErrorCode = SERVICES_system_get_toc_number(services_handle,  
                                              &number_of_tocs,  
                                              &service_error_code);  
    if (ErrorCode != SERVICES_REQ_SUCCESS)  
    {  
        return ErrorCode;  
    }  
}
```

SERVICES_system_get_toc_version

Syntax:

```
uint32_t SERVICES_system_get_toc_version (uint32_t services_handle,  
                                         uint32_t *toc_version,  
                                         uint32_t *error_code)
```

Description:

Returns the SES Software version information.

The version can be unpacked as follows

```
/* Unpack the SE version */  
  
major = (version >> 24) & 0xFF;  
minor = (version >> 16) & 0xFF;  
patch = (version >> 8) & 0xFF;
```

Parameters:

service_handle	Service Handle
toc_version	version
error_code	Service Error Code

Returns:

SERVICES_SUCCESS
toc_version

Restrictions:

None

SERVICES_system_get_toc_via_name

Syntax:

```
uint32_t SERVICES_system_get_toc_via_name(uint32_t services_handle,  
                                         const uint8_t *cpu_name,  
                                         uint32_t * error_code);
```

Description:

Returns the TOC information using the CPU name.

Parameters:

service_handle	Service Handle
cpu_name	name of Application
error_code	Service Error Code

Returns:**Restrictions:**

This function is deprecated.

Use SERVICES_system_get_toc_data() to obtain all details of the TOC data or SERVICES_system_get_toc_via_cpuid() specifying the CPU ID instead of a name.

Example:

SERVICES_system_get_toc_via_cpuid

Syntax:

```
uint32_t SERVICES_system_get_toc_via_cpuid(uint32_t services_handle,
                                             SERVICE_cpuid_t cpuid,
                                             SERVICES_toc_data_t *toc_info,
                                             uint32_t * error_code);
```

Description:

Returns the TOC information for a given CPU.

Valid CPUs are

```
typedef enum {
    HOST_CPU_0    = 0,          /**< A32_0 CPU           */
    HOST_CPU_1    = 1,          /**< A32_1 CPU           */
    EXTSYS_0      = 2,          /**< M55 HP CPU or other CPU */
    EXTSYS_1      = 3,          /**< M55 HE CPU           */
} SERVICES_cpuid_t;
```

If there is more than one TOC entry per CPUID this will be reflected in the toc_info structure returned from the SERVICE call.

Parameters:

service_handle	Service Handle
cpuid	Which Application CPU
toc_info	ATOC information
error_code	Service Error Code

Returns:

Restrictions:

Example:

```
int main (void)
{
    uint32_t ErrorCode = SERVICES_OK;
    SERVICES_toc_data_t toc_info;
    Uint32_t service_error_code;

    ErrorCode = SERVICES_system_get_toc_via_cpuid(services_handle,
                                                FUSION_M55_HE,
                                                &toc_info,
                                                &service_error_code);

    if (ErrorCode != SERVICES_REQ_SUCCESS)
    {
        return ErrorCode;
    }
}
```

```
}
```

```
/* Process each TOC entry found */
for (int each_toc = 0; each_toc < toc_info.number_of_toc_entries; each_toc++)
{
    SERVICES_toc_info_t *toc_entry_p;

    toc_entry_p = (SERVICES_toc_info_t *)&toc_info.toc_entry[each_toc];

    /* do something with the TOC information */
}
```

SERVICES_system_get_device_part_number

Syntax:

```
uint32_t SERVICES_system_get_device_part_number(uint32_t services_handle,  
                                                uint32_t *device_part_number,  
                                                uint32_t *error_code)
```

Description:

Returns the SoC device identifier.

Parameters:

service_handle	Service Handle
device_part_number	Device id (Soc ID)
error_code	Service Error Code

Returns:

device_part_number as integer e.g., 0x0000B200

Restrictions:

None

Example:

```
int main (void)  
{  
    uint32_t ErrorCode = SERVICES_OK;  
    uint32_t device_id;  
    uint32_t service_error_code;  
  
    ErrorCode = SERVICES_system_get_device_part_number(services_handle,  
                                                    &device_part_number,  
                                                    &service_error_code);  
  
    if (ErrorCode != SERVICES_REQ_SUCCESS)  
    {  
        return ErrorCode;  
    }  
}
```

SERVICES_system_get_device_data

Syntax:

```
uint32_t SERVICES_system_get_device_data(uint32_t services_handle,  
                                         SERVICES_version_data_t *device_info,  
                                         uint32_t * error_code)
```

Description:

Retrieves the Device information.

The return is SERVICES_version_data_t as follows:

```
typedef struct  
{  
    uint32_t revision_id;      /* SoC revision */  
    uint8_t ALIF_PN[16];       /* SoC part number */  
    uint8_t HBK0 [16];         /* ALIF Key */  
    uint8_t HBK1 [16];         /* ALIF Key */  
    uint8_t HBK_FW [20];       /* ALIF Firmware version */  
    uint8_t config [4];        /* Wounding data */  
    uint8_t DCU [16];          /* DCU settings */  
    uint8_t MfgData[32];       /* Manufacturing data */  
    uint8_t SerialN[8];        /* SoC Serial number */  
    uint8_t LCS;               /* SoC lifecycle state */  
} SERVICES_version_data_t;
```

Parameters:

service_handle Service Handle

device_info Device info

error_code Service Error Code

Returns:

Restrictions:

None

Example:

```
int main (void)  
{  
    uint32_t ErrorCode = SERVICES_OK;  
    uint32_t device_id;  
    SERVICES_version_data_t device_data;  
    uint32_t service_error_code;  
  
    ErrorCode = SERVICES_system_get_device_info(services_handle,  
                                              &device_data,
```

```
        &service_error_code);  
if (ErrorCode != SERVICES_REQ_SUCCESS)  
{  
    return ErrorCode;  
}  
}
```

SERVICES_get_se_revision**Syntax:**

```
uint32_t SERVICES_get_se_revision(uint32_t services_handle,
                                  uint8_t *revision_data,
                                  uint32_t *error_code)
```

Description:

Retrieve the SES Banner string.

Parameters:

service_handle	Service Handle
revision_data	banner string return
error_code	Service Error Code

Returns:

String containing the banner data. Maximum size is 80 characters.

Restrictions:

None

Example:

```
int main (void)
{
    uint32_t error_code = SERVICES_REQ_SUCCESS;
    uint32_t service_error_code;
    uint8_t se_revision[80];

    error_code = SERVICES_get_se_revision(services_handle,
                                         (uint8_t*)&se_revision[0],
                                         &services_error_code);

    if (error_code != SERVICES_REQ_SUCCESS)
    {
        /* deal with error */
    }
}
```

SERVICES_system_get_eui_extension

Syntax:

```
uint32_t SERVICES_system_get_eui_extension(uint32_t services_handle,  
                                         bool is_eui48,  
                                         uint8_t *eui_extension,  
                                         uint32_t *error_code)
```

Description:

Retrieve the EUI48/64 unique number.

Parameters:

service_handle	Service Handle
is_eui48	Which format?
eui_extension	Buffer for calculated extension
error_code	Service Error Code

Returns:**Restrictions:**

None

Example:

Application Services

Application services provide mechanisms to configure certain functions. The SE can be requested to make these configuration changes.

SERVICES_uart_write

Syntax:

```
uint32_t SERVICES_uart_write(uint32_t services_handle, size_t size, const uint8_t *uart_data)
```

Description:

SE-UART write. The buffer provided is printed via the Secure enclave UART (SE-UART) port.

Parameters:

services_handle	Service handle
size	Number of bytes to write
uart_data	Buffer containing print data

None

Returns:

Restrictions:

None

Example:

```
int main (void)
{
    uint32_t ErrorCode = SERVICES_OK;
    uint8_t buffer[256];

    ... <format print buffer>

    ErrorCode = SERVICES_uart_write(services_handle,
                                    sizeof(buffer),
                                    (uint8_t *)buffer);
    if (ErrorCode != SERVICES_REQ_SUCCESS)
    {
        return ErrorCode;
    }
}
```

SERVICES_pinmuxRefer document [se-mhu-pinmux-pad_configuration](#)**Syntax:**

```
uint32_t SERVICES_pinmux(uint32_t services_handle, uint8_t port_number,  
                         uint8_t pin_number, uint8_t configuration_value,  
                         uint32_t * error_core)
```

Description:

Pinmux request

Parameters:

services_handle

port_number Port Number

pin_number Pin Number

configuration_value ?

error_code Service Error Code

Returns:**Restrictions:**

None

Example:

```
int main (void)  
{  
    uint32_t ErrorCode = SERVICES_OK;  
    uint32_t service_error_code;  
  
    ErrorCode = SERVICES_pinmux(services_handle, 1, 14, 0, &service_error_code);  
    if (ErrorCode != SERVICES_REQ_SUCCESS)  
    {  
        return ErrorCode;  
    }  
}
```

SERVICES_padcontrolNOTE: Refer to document [se-mhu-pinmux-pad_configuration](#)

Syntax:

```
uint32_t SERVICES_padcontrol(uint32_t services_handle, uint8_t port_number,  
                            uint8_t pin_number, uint8_t configuration_value,  
                            uint32_t * error_code)
```

Description:

Pad control request.

Parameters:

services_handle	
port_number	Port Number
pin_number	Pin Number
configuration_value	?
error_code	Service Error Code

Returns:**Restrictions:**

None

Example:

```
int main (void)  
{  
    uint32_t ErrorCode = SERVICES_OK;  
    uint32_t service_error_code;  
  
    ErrorCode = SERVICES_padcontrol(services_handle, 1, 14, 0, &service_error_code);  
    if (ErrorCode != SERVICES_REQ_SUCCESS)  
    {  
        return ErrorCode;  
    }  
}  
SERVICES_application_ospi_write_key
```

Syntax:

```
uint32_t SERVICES_application_ospi_write_key(uint32_t services_handle, uint32_t command, uint8_t  
*key, uint32_t * error_code)
```

Description:

Write an AES decryption key to the OSPI registers. The command field indicates whether to use an externally provided key or a key stored in the OTP, and which OSPI to apply it to – OSPI0 or OSPI1.

```
#define OSPI_WRITE OTP_KEY_OSPI0          0  
#define OSPI_WRITE OTP_KEY_OSPI1          1  
#define OSPI_WRITE EXTERNAL_KEY_OSPI0     2  
#define OSPI_WRITE EXTERNAL_KEY_OSPI1     3
```

Parameters:

services_handle	Service handle
command	Indicates OSPI0/OSPI1 and external/OTP key
key	Buffer containing print data
error_code	Service error code

Returns:**Restrictions:**

None

Example:

Power Services

Please see other documentation on how the Ensemble series implements Power modes. The following is details regarding the SERVICES APIs not a deep dive in how they are implemented.

SERVICES_power_stop_mode_request

Syntax:

```
uint32_t SERVICES_power_stop_mode_request(uint32_t services_handle)
```

Description:

Request the Secure Enclave to enter stop mode.

Parameters:

services_handle

Returns:

ErrorCode - SERVICES_REQ_SUCCESS, SERVICES_REQ_CANNOT_EXECUTE_SERVICE

Restrictions:

Example:

```
int main (void)
{
    uint32_t ErrorCode = SERVICES_OK;

    error_code = SERVICES_power_stop_mode_request(services_handle);
    if (ErrorCode != SERVICES_REQ_SUCCESS)
    {
        return ErrorCode;
    }
}
```

SERVICES_power_ewic_config

Syntax:

```
uint32_t SERVICES_power_ewic_config(uint32_t services_handle,  
                                     uint32_t ewic_source);
```

Description:

Configure the EWIC

Parameters:

services_handle	
ewic_source	EWIC source

Returns:

ErrorCode - SERVICES_REQ_SUCCESS, SERVICES_REQ_CANNOT_EXECUTE_SERVICE

Restrictions:**Example:**

```
int main (void)  
{  
    uint32_t error_code = SERVICES_REQ_SUCCESS;  
    uint32_t ewic_config;  
  
    ewic_config &= (1 << 6);  
    error_code = SERVICES_power_ewic_config(services_handle,  
                                            ewic_config);  
  
    if (error_code != SERVICES_REQ_SUCCESS)  
    {  
        return error_code;  
    }  
}
```

SERVICES_power_wakeup_config

Syntax:

```
uint32_t SERVICES_power_wakeup_config(uint32_t services_handle,
                                       uint32_t vbat_wakeup_source,
                                       services_power_profile_t power_profile)
```

Description:

Configure the wake up source

Parameters:

services_handle

vbat_wakeup_source	Wake up source
--------------------	----------------

```
typedef enum
{
    VBAT_WAKEUP_MDM      = 0x1,           // bit0
    VBAT_WAKEUP_RTC_SE    = 0x10,          // bit4
    VBAT_WAKEUP_RTC_A     = 0x20,          // bit5
    VBAT_WAKEUP_LPCMP     = 0x40,          // bit6
    VBAT_WAKEUP_BROWN_OUT = 0x80,          // bit7
    VBAT_WAKEUP_LPTIMER   = 0XF00,         // bit11:8
    VBAT_WAKEUP_LPGPIO    = 0xFF0000,       // bit23:16
} SERVICES_wakeup_cfg_t;
```

power_profile	Power profile
---------------	---------------

```
typedef enum
{
    LOWEST_POWER_PROFILE = 0,           /*< LOWEST_POWER_PROFILE */
    HIGH_PERFORMANCE_POWER_PROFILE, /*< HIGH_PERFORMANCE_POWER_PROFILE */
    USER_SPECIFIED_PROFILE,          /*< USER_SPECIFIED_PROFILE */
    DEFAULT_POWER_PROFILE,           /*< DEFAULT_POWER_PROFILE */
    NUMBER_OF_POWER_PROFILES        /*< NUMBER_OF_POWER_PROFILES */
} services_power_profile_t;
```

Returns:

ErrorCode - SERVICES_REQ_SUCCESS, SERVICES_REQ_CANNOT_EXECUTE_SERVICE

Restrictions:

Example:

```
int main (void)
{
```

```
uint32_t error_code = SERVICES_REQ_SUCCESS;

error_code = SERVICES_power_wakeup_config(services_handle,
                                         VBAT_WAKEUP_RTC_SE
                                         | VBAT_WAKEUP_RTC_A,
                                         LOWEST_POWER_PROFILE);

if (error_code != SERVICES_REQ_SUCCESS)
{
    return error_code;
}
```

SERVICES_power_mem_retention_config

Syntax:

```
uint32_t  
SERVICES_power_mem_retention_config(uint32_t services_handle,  
                                      uint32_t mem_retention,  
                                      services_power_profile_t power_profile)
```

Description:

Configure memory retention.

Parameters:

services_handle

mem_retention Memory to be retained.

```
// Memory retention bit encoding for mem_retention_enable
#define POWER_MEM_RET_FIREWALL_RAM                         0x01UL
#define POWER_MEM_RET_SE_SRAM                                 0x02UL
#define POWER_MEM_RET_BACKUP_RAM_4KB                         0x04UL
// M55-HE TCM RET1: ITCM 0-128kb; DTCM 0-128kb
#define POWER_MEM_RET_ES1_TCM_RET1                         0x08UL
// M55-HE TCM RET1: ITCM 128-256kb; DTCM 128-256kb
#define POWER_MEM_RET_ES1_TCM_RET2                         0x10UL
// XTENSA TCM RET1: ITCM 128-512kb
#define POWER_MEM_RET_XTENSA_TCM_RET1                         0x20UL
// XTENSA TCM RET1: ITCM 64-128kb
#define POWER_MEM_RET_XTENSA_TCM_RET2                         0x40UL
// XTENSA TCM RET1: ITCM 0-64kb
#define POWER_MEM_RET_XTENSA_TCM_RET3                         0x80UL
// M55-M TCM RET1: ITCM 1MB; DTCM 384kb
#define POWER_MEM_RET_M55_M_TCM_RET1                         0x100UL
#define POWER_MEM_RET_MODEM_BACKUP_RAM_16KB                 0x200UL

power_profile                                 Power profile

typedef enum  
{  
  LOWEST_POWER_PROFILE = 0,                         /**< LOWEST_POWER_PROFILE */  
  HIGH_PERFORMANCE_POWER_PROFILE, /**< HIGH_PERFORMANCE_POWER_PROFILE */  
  USER_SPECIFIED_PROFILE,                                 /**< USER_SPECIFIED_PROFILE */  
  DEFAULT_POWER_PROFILE,                                 /**< DEFAULT_POWER_PROFILE */  
  NUMBER_OF_POWER_PROFILES                                 /**< NUMBER_OF_POWER_PROFILES */  
} services_power_profile_t;
```

Returns:

ErrorCode - SERVICES_REQ_SUCCESS, SERVICES_REQ_CANNOT_EXECUTE_SERVICE

Restrictions:**Example:**

```
int main (void)
{
    uint32_t error_code = SERVICES_REQ_SUCCESS;

    error_code = SERVICES_power_mem_retention_config(services_handle,
                                                    POWER_MEM_RETENTION_SE_RAM,
                                                    LOWEST_POWER_PROFILE);

    if (error_code != SERVICES_REQ_SUCCESS)
    {
        return error_code;
    }
}
```

SERVICES_power_m55_he_vtor_save

Syntax:

```
SERVICES_power_m55_he_vtor_save(uint32_t services_handle,
                                  uint32_t ns_vtor_addr,
                                  uint32_t se_vtor_addr,
                                  services_power_profile_t power_profile)
```

Description:

m55-he VTOR value save for wake up

Parameters:

services_handle	
ns_vtor_addr	Non-secure VTOR address
se_vtor_addr	Secure VTOR address
power_profile	Power profile

```
typedef enum
{
    LOWEST_POWER_PROFILE = 0,           /*< LOWEST_POWER_PROFILE */
    HIGH_PERFORMANCE_POWER_PROFILE, /*< HIGH_PERFORMANCE_POWER_PROFILE */
    USER_SPECIFIED_PROFILE,          /*< USER_SPECIFIED_PROFILE */
    DEFAULT_POWER_PROFILE,           /*< DEFAULT_POWER_PROFILE */
    NUMBER_OF_POWER_PROFILES        /*< NUMBER_OF_POWER_PROFILES */
} services_power_profile_t;
```

Returns:

ErrorCode - SERVICES_REQ_SUCCESS, SERVICES_REQ_CANNOT_EXECUTE_SERVICE

Restrictions:

Example:

```
int main (void)
{
    uint32_t error_code = SERVICES_REQ_SUCCESS;

    error_code = SERVICES_power_m55_he_vtor_save(services_handle,
                                                0x0,
                                                0x0,
                                                LOWEST_POWER_PROFILE);
```

```
if (error_code != SERVICES_REQ_SUCCESS)
{
    return error_code;
}
```

SERVICES_power_m55_hp_vtor_save

Syntax:

```
SERVICES_power_m55_hp_vtor_save(uint32_t services_handle,
                                  uint32_t ns_vtor_addr,
                                  uint32_t se_vtor_addr,
                                  services_power_profile_t power_profile)
```

Description:

m55-hp VTOR value save for wake up

Parameters:

services_handle	
ns_vtor_addr	Non-secure VTOR address
se_vtor_addr	Secure VTOR address
power_profile	Power profile

```
typedef enum
{
  LOWEST_POWER_PROFILE = 0,           /*< LOWEST_POWER_PROFILE */
  HIGH_PERFORMANCE_POWER_PROFILE, /*< HIGH_PERFORMANCE_POWER_PROFILE */
  USER_SPECIFIED_PROFILE,          /*< USER_SPECIFIED_PROFILE */
  DEFAULT_POWER_PROFILE,           /*< DEFAULT_POWER_PROFILE */
  NUMBER_OF_POWER_PROFILES        /*< NUMBER_OF_POWER_PROFILES */
} services_power_profile_t;
```

Returns:

ErrorCode - SERVICES_REQ_SUCCESS, SERVICES_REQ_CANNOT_EXECUTE_SERVICE

Restrictions:

Example:

```
int main (void)
{
  uint32_t error_code = SERVICES_REQ_SUCCESS;

  error_code = SERVICES_power_m55_hp_vtor_save(services_handle,
                                                0x0,
                                                0x0,
                                                LOWEST_POWER_PROFILE);
```

```
if (error_code != SERVICES_REQ_SUCCESS)
{
    return error_code;
}
```

SERVICES_corestone_standby_mode**Syntax:**

```
SERVICES_corestone_standby_mode (uint32_t services_handle,  
                                host_cpu_clus_pwr_req_t host_cpu_clus_pwr_req,  
                                bsys_pwr_req_t bsys_pwr_req,  
                                uint32_t *error_code)
```

Description:

Function to configure corestone standby mode

Parameters:

services_handle	
host_cpu_clus_pwr_req	Host CPU cluster power state request configuration
bsys_pwr_req	Base system power request configuration
power_profile	Power profile

Returns:

ErrorCode - SERVICES_REQ_SUCCESS, SERVICES_REQ_CANNOT_EXECUTE_SERVICE

Restrictions:**Example:**

```
int main (void)  
{  
    uint32_t error_code = SERVICES_REQ_SUCCESS;  
    host_cpu_clus_pwr_req_t host_cpu_clus_pwr_req;  
    bsys_pwr_req_t bsys_pwr_req;  
  
    host_cpu_clus_pwr_req.word = 0;  
    host_cpu_clus_pwr_req.bits.mem_ret_req = 0;  
    host_cpu_clus_pwr_req.bits.pwr_req = 1;  
  
    bsys_pwr_req.word = 0;  
    bsys_pwr_req.bits.systop_pwr_req = 1;  
    bsys_pwr_req.bits.dbgtop_pwr_req = 0;  
    bsys_pwr_req.bits.refclk_req = 1;  
    bsys_pwr_req.bits.wakeup_en = 0;  
  
    error_code = SERVICES_corestone_standby_mode(services_handle,  
                                                host_cpu_clus_pwr_req,
```

```
bsys_pwr_req,  
&service_error_code);  
  
if (error_code != SERVICES_REQ_SUCCESS)  
{  
    return error_code;  
}  
}
```

SERVICES_power_memory_req

Syntax:

```
uint32_t SERVICES_power_memory_req(uint32_t services_handle,  
                                    uint32_t memory_request,  
                                    uint32_t *error_code)
```

Description:

Function to disable power to SERAM0, SERAM1 or MRAM

The following are Memory requests:

```
POWER_MEM_SRAM_0_ENABLE  
POWER_MEM_SRAM_1_ENABLE  
POWER_MEM_SRAM_0_ISOLATION_ENABLE  
POWER_MEM_SRAM_1_ISOLATION_ENABLE  
POWER_MEM_MRAMEABLE
```

NOTE: This is subject to change

Parameters:

services_handle

memory_request, Which Memory to deal with

Returns:

ErrorCode - SERVICES_REQ_SUCCESS, SERVICES_REQ_CANNOT_EXECUTE_SERVICE

Restrictions:

MRAM may not be able to be disabled directly (To be checked on real device).

Example:

```
int main (void)  
{  
    error_code = SERVICES_power_memory_req(services_handle,  
                                            (POWER_MEM_SRAM_0_ENABLE |  
                                             POWER_MEM_SRAM_1_ISOLATION_ENABLE),  
                                            &return_error_code);  
  
    if (error_code != SERVICES_REQ_SUCCESS)  
    {  
        return error_code;  
    }  
}
```

SERVICES_get_run_cfg

Syntax:

```
uint32_t SERVICES_get_run_cfg(uint32_t services_handle,  
                           run_profile_t *pp,  
                           uint32_t *error_code);
```

Description:

Retrieve the current RUN mode status.

Parameters:

services_handle

pp Run mode parameter block.

error_code Return error code

Returns:

ErrorCode - SERVICES_REQ_SUCCESS, SERVICES_REQ_CANNOT_EXECUTE_SERVICE

Restrictions:

Example:

```
int main (void)  
{  
    uint32_t error_code = SERVICES_REQ_SUCCESS;  
    run_profile_t runp;  
  
    error_code = SERVICES_get_run_cfg(services_handle, &runp,  
                                      &service_error_code);  
  
    if (error_code != SERVICES_REQ_SUCCESS)  
    {  
        return error_code;  
    }  
}
```

SERVICES_set_run_cfg

Syntax:

```
uint32_t SERVICES_set_run_cfg(uint32_t services_handle,  
                           run_profile_t *pp,  
                           uint32_t *error_code);
```

Description:

Set the RUN mode parameters.

Parameters:

services_handle	
pp	Run mode parameters.
error_code	Return error code

Returns:

ErrorCode - SERVICES_REQ_SUCCESS, SERVICES_REQ_CANNOT_EXECUTE_SERVICE

Restrictions:

Example:

```
int main (void)  
{  
    uint32_t error_code = SERVICES_REQ_SUCCESS;  
    run_profile_t runp;  
  
    error_code = SERVICES_set_run_cfg(services_handle, &runp,  
                                      &service_error_code);  
  
    if (error_code != SERVICES_REQ_SUCCESS)  
    {  
        return error_code;  
    }  
}
```

SERVICES_get_off_cfg

Syntax:

```
uint32_t SERVICES_get_off_cfg(uint32_t services_handle,  
                             off_profile_t *wp,  
                             uint32_t *error_code);
```

Description:

Retrieved the current OFF mode parameters.

Parameters:

services_handle	
wp	Off mode parameter block
error_code	Return error code

Returns:

ErrorCode - SERVICES_REQ_SUCCESS, SERVICES_REQ_CANNOT_EXECUTE_SERVICE

Restrictions:

Example:

```
int main (void)  
{  
    uint32_t error_code = SERVICES_REQ_SUCCESS;  
    ewic_config);  
    off_profile_t off_mode;  
  
    error_code = SERVICES_set_off_cfg(services_handle,  
                                      &off_mode,  
                                      &service_error_code);  
  
    if (error_code != SERVICES_REQ_SUCCESS)  
    {  
        return error_code;  
    }  
}
```

SERVICES_set_off_cfg

Syntax:

```
uint32_t SERVICES_set_off_cfg(uint32_t services_handle,  
                             off_profile_t *wp,  
                             uint32_t *error_code);
```

Description:

Set the OFF-mode parameters.

Parameters:

services_handle	
wp	off mode parameter block
error_code	Return error

Returns:

ErrorCode - SERVICES_REQ_SUCCESS, SERVICES_REQ_CANNOT_EXECUTE_SERVICE

Restrictions:

Example:

```
int main (void)  
{  
    uint32_t error_code = SERVICES_REQ_SUCCESS;  
    off_profile_t off_mode;  
  
    error_code = SERVICES_get_off_cfg(services_handle,  
                                      &runp,  
                                      &service_error_code);  
  
    if (error_code != SERVICES_REQ_SUCCESS)  
    {  
        return error_code;  
    }  
}
```

SERVICES_power_dc(dc_voltage_control)

Syntax:

```
uint32_t  
  
SERVICES_power_dc(dc_voltage_control(uint32_t services_handle,  
                                      uint32_t dc(dc_vout_sel,  
                                      uint32_t dc(dc_vout_trim,  
                                      uint32_t *error_code))
```

Description:

Sets the DCDC voltage and trimming.

Parameters:

services_handle	
dc(dc_vout_sel	Selection shift
dc(dc_vout_trim	Trimming shift
error_code	Return error

Returns:

ErrorCode - SERVICES_REQ_SUCCESS, SERVICES_REQ_CANNOT_EXECUTE_SERVICE

Restrictions:**Example:**

SERVICES_power_Ido_voltage_control

Syntax:

```
uint32_t  
  
SERVICES_power_Ido_voltage_control(uint32_t services_handle,  
                                      uint32_t ret_Ido_voltage,  
                                      uint32_t aon_Ido_voltage,  
                                      uint32_t *error_code))
```

Description:

LDO voltage control

Parameters:

services_handle

ret_ldo_voltage retention voltage

aon_ldo_voltage AON voltage

error_code Return error

Returns:

ErrorCode - SERVICES_REQ_SUCCESS, SERVICES_REQ_CANNOT_EXECUTE_SERVICE

SERVICES_power_setting_configure

Syntax:

```
uint32_t SERVICES_power_setting_configure(  
    uint32_t services_handle,  
    power_setting_t setting_type,  
    uint32_t value, uint32_t *error_code)  
  
typedef enum {  
    POWER_SETTING_BOR_EN,  
    POWER_SETTING_SCALED_CLK_FREQ,  
} power_setting_t;
```

Description:

Configure a power-related setting. Currently, BOR_EN and SCALED_CLK_FREQ are supported.

Parameters:

services_handle

setting_type Power setting type

value Setting value

error code Service error code

Returns:

Transport layer error code

SERVICES_power_setting_get

Syntax:

```
uint32_t SERVICES_power_setting_get(  
    uint32_t services_handle,  
    power_setting_t setting_type,  
    uint32_t *value,  
    uint32_t *error_code)
```

Description:

Get a power-related setting. Currently, BOR_EN and SCALED_CLK_FREQ are supported.

Parameters:

services_handle	
setting_type	Power setting type
value	Setting value
error code	Service error code

Returns:

Transport layer error code

Clocks Services

Services to control the Clock, PLL and XTAL (High-frequency external oscillator) settings.

Clock frequency definitions

```
typedef enum {
    CLOCK_FREQUENCY_800MHZ,
    CLOCK_FREQUENCY_400MHZ,
    CLOCK_FREQUENCY_300MHZ,
    CLOCK_FREQUENCY_200MHZ,
    CLOCK_FREQUENCY_160MHZ,
    CLOCK_FREQUENCY_120MHZ,
    CLOCK_FREQUENCY_80MHZ,
    CLOCK_FREQUENCY_60MHZ,
    CLOCK_FREQUENCY_100MHZ,
    CLOCK_FREQUENCY_50MHZ,
    CLOCK_FREQUENCY_20MHZ,
    CLOCK_FREQUENCY_10MHZ,
    CLOCK_FREQUENCY_76_8_RC_MHZ,
    CLOCK_FREQUENCY_38_4_RC_MHZ,
    CLOCK_FREQUENCY_76_8_XO_MHZ,
    CLOCK_FREQUENCY_38_4_XO_MHZ,
    CLOCK_FREQUENCY_DISABLED
} clock_frequency_t;

typedef enum {
    SCALED_FREQ_RC_ACTIVE_76_8_MHZ = 0,
    SCALED_FREQ_RC_ACTIVE_38_4_MHZ,
    SCALED_FREQ_RC_ACTIVE_19_2_MHZ,
    SCALED_FREQ_RC_ACTIVE_9_6_MHZ,
    SCALED_FREQ_RC_ACTIVE_4_8_MHZ,
    SCALED_FREQ_RC_ACTIVE_2_4_MHZ,
    SCALED_FREQ_RC_ACTIVE_1_2_MHZ,
    SCALED_FREQ_RC_ACTIVE_0_6_MHZ,

    SCALED_FREQ_RC_STDBY_76_8_MHZ = 8,
    SCALED_FREQ_RC_STDBY_38_4_MHZ,
    SCALED_FREQ_RC_STDBY_19_2_MHZ,
    SCALED_FREQ_RC_STDBY_4_8_MHZ,
    SCALED_FREQ_RC_STDBY_1_2_MHZ,
    SCALED_FREQ_RC_STDBY_0_6_MHZ,
    SCALED_FREQ_RC_STDBY_0_3_MHZ,
    SCALED_FREQ_RC_STDBY_0_075_MHZ,

    SCALED_FREQ_XO_LOW_DIV_38_4_MHZ = 16,
}
```

```

SCALED_FREQ_XO_LOW_DIV_19_2_MHZ,
SCALED_FREQ_XO_LOW_DIV_9_6_MHZ,
SCALED_FREQ_XO_LOW_DIV_4_8_MHZ,
SCALED_FREQ_XO_LOW_DIV_2_4_MHZ,
SCALED_FREQ_XO_LOW_DIV_1_2_MHZ,
SCALED_FREQ_XO_LOW_DIV_0_6_MHZ,
SCALED_FREQ_XO_LOW_DIV_0_3_MHZ,

SCALED_FREQ_XO_HIGH_DIV_38_4_MHZ = 24,
SCALED_FREQ_XO_HIGH_DIV_19_2_MHZ,
SCALED_FREQ_XO_HIGH_DIV_9_6_MHZ,
SCALED_FREQ_XO_HIGH_DIV_2_4_MHZ,
SCALED_FREQ_XO_HIGH_DIV_0_6_MHZ,
SCALED_FREQ_XO_HIGH_DIV_0_3_MHZ,
SCALED_FREQ_XO_HIGH_DIV_0_15_MHZ,
SCALED_FREQ_XO_HIGH_DIV_0_0375_MHZ,
SCALED_FREQ_NONE
} scaled_clk_freq_t;

```

SERVICES_clocks_select_osc_source

Syntax:

```

uint32_t SERVICES_clocks_select_osc_source (
    uint32_t services_handle,
    oscillator_source_t source,
    oscillator_target_t target,
    uint32_t * error_code)

```

Description:

Selects between RC or XTAL clock source for various modules (HF or LF). The selected clock is referred to as the 'OSC' clock.

Type definitions:

```

typedef enum {
    OSCILLATOR_SOURCE_RC, // use RC as oscillator clock
    OSCILLATOR_SOURCE_XTAL // use XTAL as oscillator clock
} oscillator_source_t;

typedef enum {
    OSCILLATOR_TARGET_SYS_CLOCKS, // various system clocks
    OSCILLATOR_TARGET_PERIPH_CLOCKS, // clock for peripherals
    OSCILLATOR_TARGET_S32K_CLOCK // 32K low frequency clock
} oscillator_target_t;

```

Parameters:

services_handle
source RC or XTAL (either HF or LF, depending on the target)

target SYS clocks, PERIPH clocks, S32K clock
error code Service error code

Returns:

Transport layer error code

SERVICES_clocks_select_pll_source

Syntax:

```
uint32_t SERVICES_clocks_select_pll_source(  
    uint32_t services_handle,  
    pll_source_t source,  
    pll_target_t target,  
    uint32_t * error_code)
```

Description:

Select OSC or PLL as the source clock for various modules.

Type definitions:

```
typedef enum {  
    PLL_SOURCE_PLL, // use the PLL clocks  
    PLL_SOURCE_OSC // use the OCS clocks (can be RC or XTAL)  
} pll_source_t;  
  
typedef enum {  
    PLL_TARGET_SYSREFCLK,  
    PLL_TARGET_SYSCLK,  
    PLL_TARGET_UART,  
    PLL_TARGET_ES0,  
    PLL_TARGET_ES1,  
    PLL_TARGET_SECENC,  
    PLL_TARGET_PD4_SRAM  
} pll_target_t;
```

Parameters:

services_handle
source OSC or PLL
target SYSREFCLK, SYSCLK, ES0, ES1
error code Service error code

Returns:

Transport layer error code

SERVICES_clocks_enable_clock

Syntax:

```
uint32_t SERVICES_clocks_enable_clock(
    uint32_t services_handle,
    clock_enable_t clock,
    bool enable,
    uint32_t * error_code)
```

Description:

Enable or disable a clock.

Type definitions:

```
typedef enum {
    CLKEN_SYSPLL,
    CLKEN_CPUPLL,
    CLKEN_ES0,
    CLKEN_ES1,
    CLKEN_HFXO_OUT,
    CLKEN_CLK_160M,
    CLKEN_CLK_100M,
    CLKEN_USB,
    CLKEN_HFOSC,
    CLKEN_SRAM0,
    CLKEN_SRAM1
} clock_enable_t;
```

Parameters:

services_handle	
clock	Clock to enable or disable
enable	Enable/disable flag
error code	Service error code

Returns:

Transport layer error code

SERVICES_clocks_set_ES0_frequency

Syntax:

```
uint32_t SERVICES_clocks_set_ES0_frequency(  
    uint32_t services_handle,  
    clock_frequency_t frequency,  
    uint32_t * error_code)
```

Description:

Set the frequency of External System 0 (M55-HP).

Parameters:

services_handle
frequency Frequency to set
error code Service error code

Returns:

Transport layer error code

SERVICES_clocks_set_ES1_frequency

Syntax:

```
uint32_t SERVICES_clocks_set_ES1_frequency(  
    uint32_t services_handle,  
    clock_frequency_t frequency,  
    uint32_t * error_code)
```

Description:

Set the frequency of External System 1 (M55-HE).

Parameters:

services_handle
frequency Frequency to set
error code Service error code

Returns:

Transport layer error code

SERVICES_clocks_select_a32_source

Syntax:

```
uint32_t SERVICES_clocks_select_a32_source (
    uint32_t services_handle,
    a32_source_t source,
    uint32_t * error_code)
```

Description:

Selects the clock source for the A32 CPU cores.

Type definitions:

```
typedef enum {
    A32_CLOCK_GATE = 0,
    A32_REFCLK = 1,
    A32_SYSPLL = 2,
    A32_CPUPLL = 4
} a32_source_t;
```

Parameters:

services_handle
source Clock source – CPUPLL, SYSPLL, REFCLK, Clock gate
error code Service error code

Returns:

Transport layer error code

SERVICES_clocks_select_aclk_source

Syntax:

```
uint32_t SERVICES_clocks_select_aclk_source (
    uint32_t services_handle,
    aclk_source_t source,
    uint32_t * error_code)
```

Description:

Selects the clock source for the AXI bus.

Type definitions:

```
typedef enum {
    ACLK_CLOCK_GATE = 0,
    ACLK_REFCLK = 1,
    ACLK_SYSPLL = 2
} aclk_source_t;
```

Parameters:

services_handle	
source	Clock source – SYSPLL, REFCLK, Clock gate
error code	Service error code

Returns:

Transport layer error code

SERVICES_clocks_set_divider

Syntax:

```
uint32_t SERVICES_clocks_set_divider (
    uint32_t services_handle,
    clock_divider_t divider,
    uint32_t value, uint32_t * error_code)
```

Description:

Selects the value of a clock divider.

Type definitions:

```
typedef enum {
    DIVIDER_CPUPLL,
    DIVIDER_SYSPLL,
    DIVIDER_ACLK,
    DIVIDER_HCLK,
    DIVIDER_PCLK
} clock_divider_t;
```

Parameters:

services_handle

divider Which divider to set – CPUPLL, SYSPLL, ACLK (Corstone), HCLK, PCLK (Alif)

value Divider value. 0x0 to 0x1F for Corstone dividers, 0x0 to 0x2 for Alif divider

error code Service error code

Returns:

Transport layer error code

SERVICES_clocks_get_clocks

Syntax:

```
uint32_t SERVICES_clocks_get_clocks(  
    uint32_t services_handle,  
    clk_get_clocks_svc_t ** pp_svc,  
    scaled_clk_freq_t * scaled_clk_freq,  
    uint32_t * error_code)
```

Description:

Get the values of the clocks registers.

Parameters:

services_handle	
pp_svc	Return values of clocks registers
error code	Service error code

Returns:

Transport layer error code

SERVICES_clocks_get_apb_frequency - OBSOLETE

Syntax:

```
uint32_t SERVICES_clocks_get_apb_frequency(uint32_t services_handle, uint32_t * frequency, uint32_t  
* error_code)
```

Description:

Get the values of the APB clocks frequency.

This function is now OBSOLETE and will be removed. Use SERVICES_clocks_setting_get() instead.

Parameters:

services_handle	
frequency	Return frequency
error code	Service error code

Returns:

Transport layer error code

SERVICES_clocks_get_refclk_frequency - OBSOLETE

Syntax:

```
uint32_t SERVICES_clocks_get_refclk_frequency(uint32_t services_handle, uint32_t * frequency,  
uint32_t * error_code)
```

Description:

Get the values of the REFCLK frequency.

This function is now OBSOLETE and will be removed. Use SERVICES_clocks_setting_get() instead.

Parameters:

services_handle	
frequency	Return frequency
error code	Service error code

Returns:

Transport layer error code

SERVICES_clocks_setting_get

Syntax:

```
uint32_t SERVICES_clocks_setting_get(uint32_t services_handle, clocks_setting_t setting_type, uint32_t  
*value, uint32_t *error_code)
```

Description:

Get a clock-related setting. Currently, the following settings are supported –

```
typedef enum {  
    CLOCK_SETTING_HFOSC_FREQ,  
    CLOCK_SETTING_EXTSYS0_FREQ,  
    CLOCK_SETTING_EXTSYS1_FREQ,  
    CLOCK_SETTING_AXI_FREQ,  
    CLOCK_SETTING_AHB_FREQ,  
    CLOCK_SETTING_APB_FREQ,  
    CLOCK_SETTING_SYSREF_FREQ,  
} clock_setting_t;
```

Parameters:

services_handle	
setting_type	Power setting type
value	Setting value
error code	Service error code

Returns:

Transport layer error code

SERVICES_pll_xtal_start

Syntax:

```
uint32_t SERVICES_pll_xtal_start(uint32_t services_handle, bool faststart, bool boost, uint32_t delay_count, uint32_t * error_code)
```

Description:

Start the external HF crystal.

Parameters:

services_handle	
faststart	Enable ‘fast start’ mode
boost	Enable ‘boost’ mode
delay_count	Timeout to wait for crystal startup
error code	Service error code

Returns:

Transport layer error code

SERVICES_pll_xtal_stop

Syntax:

```
uint32_t SERVICES_pll_xtal_stop(uint32_t services_handle, uint32_t * error_code)
```

Description:

Stop the external HF crystal.

Parameters:

services_handle	
error code	Service error code

Returns:

Transport layer error code

SERVICES_pll_xtal_is_started

Syntax:

```
uint32_t SERVICES_pll_xtal_is_started(uint32_t services_handle, bool * is_started, uint32_t * error_code)
```

Description:

Check if the external HF Crystal is started.

Parameters:

services_handle
is_started External HF Crystal started status
error code Service error code

Returns:

Transport layer error code

SERVICES_pll_clkpll_start

Syntax:

```
uint32_t SERVICES_pll_clkpll_start(uint32_t services_handle, bool faststart, uint32_t delay_count, uint32_t * error_code)
```

Description:

Start the PLL.

Parameters:

services_handle
faststart Enable 'fast start' mode
delay_count Timeout to wait for PLL lock
error code Service error code

Returns:

Transport layer error code

SERVICES_pll_clkpll_stop

Syntax:

```
uint32_t SERVICES_pll_clkpll_stop(uint32_t services_handle, uint32_t * error_code)
```

Description:

Stop the PLL.

Parameters:

services_handle
error code Service error code

Returns:

Transport layer error code

SERVICES_pll_clkpll_is_locked

Syntax:

```
uint32_t SERVICES_pll_clkpll_is_locked(uint32_t services_handle, bool * is_locked, uint32_t * error_code)
```

Description:

Check if the PLL is started and locked.

Parameters:

services_handle
is_locked PLL locked status
error code Service error code

Returns:

Transport layer error code

SERVICES_pll_initialize

Syntax:

```
uint32_t SERVICES_pll_initialize(uint32_t services_handle, uint32_t * error_code)
```

Description:

Initialize the device to enable XTAL and PLL and switch all clocks to PLL.

Parameters:

services_handle
error code Service error code

Returns:

Transport layer error code

[SERVICES_pll_deinit](#)

Syntax:

```
uint32_t SERVICES_pll_deinit(uint32_t services_handle, uint32_t * error_code)
```

Description:

De-initialize the device – switch all clocks to TC and disable XTAL and PLL.

Parameters:

services_handle
error code Service error code

Returns:

Transport layer error code

[Boot Services](#)

Most Services in this group have a `cpu_id` parameter. The supported CPU ids are –

HOST_CPU_0	A32_0
HOST_CPU_1	A32_1
EXTSYS_0	M55 HP CPU
EXTSYS_1	M55 HE CPU

[SERVICES_boot_process_toc_entry](#)

Syntax:

```
uint32_t SERVICES_boot_process_toc_entry(uint32_t services_handle, const uint8_t * entry_id,  
uint32_t *error_code)
```

Description:

Request to process a TOC entry. Depending on the information in the TOC entry, this could result in the booting of a CPU core. The TOC entry should also be in a DEFERRED state which means on Boot up it is not automatically booted by SES. This SERVICE call will un-defer the TOC entry.

This is a higher-level function compared to the other Boot services and is a convenient way to boot a CPU core.

Parameters:

services_handle

entry_id

ID of the TOC entry to process. The ‘entry_id’ field is 8 bytes in size, matching the corresponding TOC entry field ‘image_identifier’.

error_code

Service Error Code

Returns:**Restrictions:**

None

[SERVICES_boot_cpu](#)**Syntax:**

```
uint32_t SERVICES_boot_cpu(uint32_t services_handle, uint32_t cpu_id, uint32_t address, uint32_t *  
error_code)
```

Description:

Request to boot a CPU core.

This service does not perform image loading, verification, etc., it just boots the core, specifying the boot address. You would need to use an ATOC to achieve these.

For the M55 cores, there are cases in which this service does not work. The currently known case is the M55-HP core in FUSION REV_Bx devices, where resetting the core also invalidates its TCM content. For that reason, it is recommended that the M55 cores are booted using one of the following methods –

- SERVICES_boot_process_toc_entry().
- SERVICES_set_vtor(), SERVICES_reset_cpu(), and SERVICES_release_cpu(), described in the next sections.

Parameters:**services_handle****cpu_id**

ID of the CPU to boot

address

Boot address for the CPU

error_code

Service Error Code

Returns:**Restrictions:**

None

SERVICES_boot_set_vtor

Syntax:

```
uint32_t SERVICES_boot_set_vtor(uint32_t services_handle, uint32_t cpu_id, uint32_t address, uint32_t * error_code)
```

Description:

Request to initialize the VTOR value for a M55 CPU core.

Note that the address value is stored in a Global register, not in the CPU's internal VTOR register. To transfer the address to the internal VTOR, call SERVICES_reset_cpu() after this call.

Parameters:

services_handle	
cpu_id	ID of the CPU to boot
address	The address to be stored in the VTOR
error_code	Service Error Code

Returns:

Restrictions:

EXT_SYS0 is not a valid operation on Ensemble devices.

SERVICES_boot_reset_cpu

Syntax:

```
uint32_t SERVICES_boot_reset_cpu(uint32_t services_handle, uint32_t cpu_id, uint32_t * error_code)
```

Description:

Request to reset a CPU core, which effectively stops the core. For M55 cores, it also transfers the VTOR value from the Global VTOR register to the CPU's internal VTOR.

Parameters:

services_handle	
cpu_id	ID of the CPU to boot
error_code	Service Error Code

Returns:

Restrictions:

None

SERVICES_boot_release_cpu

Syntax:

```
uint32_t SERVICES_boot_release_cpu(uint32_t services_handle, uint32_t cpu_id, uint32_t * error_code)
```

Description:

Request to release a CPU core. This service does not perform image loading, verification, etc., and does not reset the CPU or specify the boot address, it just releases the core.

If the CPU is not running, this function can be called to release it.

If the CPU is running, SERVICES_boot_reset_cpu() must be called before this function to stop the core.

Notes on releasing M55 cores –

- in some cases, resetting the core also invalidates its TCM. A known case is the M55-HP core in Ensemble devices. Because of that, after calling SERVICES_boot_reset_cpu() to stop the core, the image in the TCM must be reloaded, before calling SERVICES_boot_release_cpu() to start the core.
- If the VTOR value of the core needs to be changed, that too requires calling SERVICES_boot_reset_cpu(), to transfer the new address value to the core's internal VTOR. So, the call order of services in this case is –
 1. SERVICES_boot_set_vtor(),
 2. SERVICES_boot_reset_cpu(),
 3. load the image in the TCM, 3. SERVICES_boot_release_cpu().

Parameters:

services_handle	
cpu_id	ID of the CPU to boot
error_code	Service Error Code

Returns:

Restrictions:

SERVICES_boot_reset_soc

Syntax:

```
uint32_t SERVICES_boot_reset_soc(uint32_t services_handle)
```

Description:

Request to reset the entire SoC.

Parameters:

services_handle

Returns:**Restrictions:**

None

Crypto Services

The SE provides several crypto services to other cores as detailed below.

SERVICES_cryptocell_get_rnd

Syntax:

```
uint32_t SERVICES_cryptocell_get_rnd(uint32_t services_handle, uint16_t rnd_length, void * rnd_value,  
uint32_t * error_code)
```

Description:

Request random number.

The service SERVICES_cryptocell_get_rnd returns a random vector generated by the cryptocell-rt library using the MBedTLS API call mbedtls_ctr_drbg_random().

The desired length of the vector to generate is passed as an input parameter. Currently, the maximum supported vector length is 128 bytes.

Parameters:

services_handle

rnd_length Length of random number vector

rnd_value returned Random number

error_code Service Error Code

None

Returns:

Restrictions:

None

Example:

```
int main (void)  
{  
    uint32_t ErrorCode = SERVICES_OK;  
    uint64_t rnd_value;  
    uint32_t service_error_code;  
  
    ErrorCode = SERVICES_cryptocell_get_rnd(services_handle,  
                                                      sizeof(uint64_t), /* random number/vector length in bytes*/  
                                                      &rnd_value,
```

```
        &service_error_code);
if (ErrorCode != SERVICES_REQ_SUCCESS)
{
    return ErrorCode;
}
}
```

SERVICES_cryptocell_get_lcs

Syntax:

```
uint32_t SERVICES_cryptocell_get_lcs(uint32_t services_handle, uint32_t *lcs_state, uint32_t *
error_code)
```

Description:

The service SERVICES_cryptocell_get_lcs returns the current Life Cycle State.

Parameters:

services_handle

lcs_state Life cycle state

error_code Service Error Code

Returns:

Restrictions:

None

Example:

```
int main (void)
{
    uint32_t ErrorCode = SERVICES_OK;
    uint32_t lcs_state;
    uint32_t service_error_code

    ErrorCode = SERVICES_cryptocell_get_lcs(services_handle, &lcs_state,
&service_error_code);
    if (ErrorCode != SERVICES_REQ_SUCCESS)
    {
        return ErrorCode;
    }
}
```

MbedTLS Services

These services expose the hardware accelerated functionality provided by the Arm CryptoCell-RT library in SES.

Arm has chosen to use MbedTLS as the public API to that functionality. For that reason, the exposed Services correspond to MbedTLS public APIs.

IMPORTANT: These Services are not intended to be used directly by applications. Instead, they should be used by a client-side MbedTLS library implementation in which hardware acceleration is done by calling the Services.

To simplify the Services APIs and to avoid introducing MbedTLS types into them, all parameters of the MbedTLS functions are passed as uint32_t. The client-side MbedTLS implementation must convert them to the appropriate types. Also, to reduce the number of Service APIs, some of them cover multiple MbedTLS API functions.

Please refer to the MbedTLS documentation for more information on these APIs, usage and parameters.

SERVICES_cryptocell_mbedtls_hardware_poll

Syntax:

```
uint32_t SERVICES_cryptocell_mbedtls_hardware_poll(uint32_t services_handle,  
                                                 uint32_t * error_code,  
                                                 uint32_t data,  
                                                 uint32_t output,  
                                                 uint32_t len,  
                                                 uint32_t olen)
```

Description:

Service API replacement for mbedtls_hardware_poll()

SERVICES_cryptocell_mbedtls_aes_init

Syntax:

```
uint32_t SERVICES_cryptocell_mbedtls_aes_init(uint32_t services_handle,  
                                              uint32_t * error_code,  
                                              uint32_t ctx)
```

Description:

Service API replacement for mbedtls_aes_init()

SERVICES_cryptocell_mbedtls_aes_set_key

Syntax:

```
uint32_t SERVICES_cryptocell_mbedtls_aes_set_key(uint32_t services_handle,  
                                               uint32_t * error_code,
```

```
    uint32_t ctx,  
    uint32_t key,  
    uint32_t keybits,  
    uint32_t dir)
```

Description:

Service API replacement for mbedtls_aes_set_key_enc() and mbedtls_aes_set_key_dec()

*SERVICES_cryptocell_mbedtls_aes_crypt***Syntax:**

```
uint32_t SERVICES_cryptocell_mbedtls_aes_crypt(uint32_t services_handle,  
                                              uint32_t * error_code,  
                                              uint32_t ctx,  
                                              uint32_t crypt_type,  
                                              uint32_t mode,  
                                              uint32_t length,  
                                              uint32_t iv,  
                                              uint32_t input,  
                                              uint32_t output)
```

Description:

Service API replacement for the mbedtls_aes_crypt_XXX functions

*SERVICES_cryptocell_mbedtls_sha_starts***Syntax:**

```
uint32_t SERVICES_cryptocell_mbedtls_sha_starts(uint32_t services_handle,  
                                               uint32_t * error_code,  
                                               uint32_t ctx,  
                                               uint32_t sha_type)
```

Description:

Service API replacement for mbedtls_sha_starts()

*SERVICES_cryptocell_mbedtls_sha_process***Syntax:**

```
uint32_t SERVICES_cryptocell_mbedtls_sha_process(uint32_t services_handle,
                                                uint32_t * error_code,
                                                uint32_t ctx,
                                                uint32_t sha_type,
                                                uint32_t data)
```

Description:

Service API replacement for mbedtls_sha_process()

*SERVICES_cryptocell_mbedtls_sha_update***Syntax:**

```
uint32_t SERVICES_cryptocell_mbedtls_sha_update(uint32_t services_handle,
                                                uint32_t * error_code,
                                                uint32_t ctx,
                                                uint32_t sha_type,
                                                uint32_t data,
                                                uint32_t data_length)
```

Description:

Service API replacement for mbedtls_sha_update()

*SERVICES_cryptocell_mbedtls_sha_finish***Syntax:**

```
uint32_t SERVICES_cryptocell_mbedtls_sha_finish(uint32_t services_handle,
                                                uint32_t * error_code,
                                                uint32_t ctx,
                                                uint32_t sha_type,
                                                uint32_t data)
```

Description:

Service API replacement for mbedtls_sha_finish()

*SERVICES_cryptocell_mbedtls_ccm_gcm_set_key***Syntax:**

```
uint32_t SERVICES_cryptocell_mbedtls_ccm_gcm_set_key(uint32_t services_handle,  
          uint32_t * error_code,  
          uint32_t context_addr,  
          uint32_t key_type,  
          uint32_t cipher,  
          uint32_t key_addr,  
          uint32_t key_bits)
```

Description:

Service API replacement for mbedtls_ccm_set_key() and mbedtls_gcm_set_key()

*SERVICES_cryptocell_mbedtls_ccm_gcm_crypt***Syntax:**

```
uint32_t SERVICES_cryptocell_mbedtls_ccm_gcm_crypt(uint32_t services_handle,  
          uint32_t * error_code,  
          uint32_t context_addr,  
          uint32_t crypt_type,  
          uint32_t length,  
          uint32_t iv_addr,  
          uint32_t iv_length,  
          uint32_t add_addr,  
          uint32_t add_length,  
          uint32_t input_addr,  
          uint32_t output_addr,  
          uint32_t tag_addr,  
          uint32_t tag_length)
```

Description:

Service API replacement for the mbedtls CCM and GCM crypto functions

*SERVICES_cryptocell_mbedtls_chacha20_crypt***Syntax:**

```
uint32_t SERVICES_cryptocell_mbedtls_chacha20_crypt(uint32_t services_handle,  
          uint32_t * error_code,  
          uint32_t key_addr,  
          uint32_t nonce_addr,  
          uint32_t counter,  
          uint32_t data_len,  
          uint32_t input_addr,  
          uint32_t output_addr)
```

Description:

Service API replacement for mbedtls_chacha20_crypt()

*SERVICES_cryptocell_mbedtls_chachapoly_crypt***Syntax:**

```
uint32_t SERVICES_cryptocell_mbedtls_chachapoly_crypt(uint32_t services_handle,  
    uint32_t * error_code,  
    uint32_t context_addr,  
    uint32_t crypt_type,  
    uint32_t length,  
    uint32_t nonce_addr,  
    uint32_t aad_addr,  
    uint32_t aad_len,  
    uint32_t tag_addr,  
    uint32_t input_addr,  
    uint32_t output_addr)
```

Description:

Service API replacement for the mbedtls chachapoly crypto functions

*SERVICES_cryptocell_mbedtls_poly1305_crypt***Syntax:**

```
uint32_t SERVICES_cryptocell_mbedtls_poly1305_crypt(uint32_t services_handle,  
    uint32_t * error_code,  
    uint32_t key_addr,  
    uint32_t input_addr,  
    uint32_t ilen,  
    uint32_t mac_addr)
```

Description:

Service API replacement for mbedtls_poly1305_mac()

*SERVICES_cryptocell_mbedtls_cmac_init_setkey***Syntax:**

```
uint32_t SERVICES_cryptocell_mbedtls_cmac_init_setkey(uint32_t services_handle,  
    uint32_t * error_code,  
    uint32_t context_addr,  
    uint32_t key_addr,  
    uint32_t key_bits)
```

Description:

Service API replacement for mbedtls_cmac_init_setkey()

*SERVICES_cryptocell_mbedtls_cmac_update***Syntax:**

```
uint32_t SERVICES_cryptocell_mbedtls_cmac_update(uint32_t services_handle,  
    uint32_t * error_code,  
    uint32_t context_addr,  
    uint32_t input_addr,  
    uint32_t input_length)
```

Description:

Service API replacement for mbedtls_cmac_update()

*SERVICES_cryptocell_mbedtls_cmac_finish***Syntax:**

```
uint32_t SERVICES_cryptocell_mbedtls_cmac_finish(uint32_t services_handle,  
    uint32_t * error_code,  
    uint32_t context_addr,  
    uint32_t output_addr)
```

Description:

Service API replacement for mbedtls_cmac_finish()

*SERVICES_cryptocell_mbedtls_cmac_reset***Syntax:**

```
uint32_t SERVICES_cryptocell_mbedtls_cmac_reset(uint32_t services_handle,  
    uint32_t * error_code,  
    uint32_t context_addr)
```

Description:

Service API replacement for mbedtls_cmac_reset()

Update Services

SERVICES_update_stoc

Syntax:

```
uint32_t SERVICES_update_stoc(uint32_t services_handle,
                               uint32_t image_address,
                               uint32_t image_size,
                               uint32_t *error_code)
```

Description:

Update the ALIF STOC using the provided image.

This image uses the ALIF Update Package format (as this is used to update the ALIF System FW). Packages are either FULL or PARTIAL.

The processing steps are as follows:

- Stage#1 Check package header is an UPD package
- Stage#2 Verify UPD package signature
- Stage#3 Check UPDPackage Part# matches this device
- Stage#4 Write MRAM

Parameters:

services_handle

Address of the source of the update image.

image_address

Size of the update image, only used with UNSIGNED Packages

Image_size

error_code

Returns:

BL_ERROR_ENTRY_NOT_SIGNED	0x17	
BL_ERROR_UPD_SIGNATURE_INCORRECT	0x21	Package is not in ALIF UPD format

Restrictions:

The UPDATE Package is supplied (and signed) by ALIF.

Partial UPDATE packages are not currently available.

The UPDATE Package cannot be placed in MRAM. We currently do not support image verification in MRAM. The image must be placed in a RAM area.

This SERVICE is not intended to be used for Application Over-the-air updates.

External System Services

These SERVICES are only relevant for the BALLETTO (Blue Tooth) Products.

They will return SERVICES_RESP_UNKNOWN_COMMAND when used with ENSEMBLE devices.

Boot arguments

```
// ESO CPU clock frequencies
#define ESO_CLOCK_16MHZ 0
#define ESO_CLOCK_24MHZ 4
#define ESO_CLOCK_48MHZ 0xC

// ExtSys0 Boot arguments
typedef struct {
    uint32_t nvds_src_addr;
    uint32_t nvds_dst_addr;
    uint32_t nvds_copy_len;
    uint32_t trng_dst_addr;
    uint32_t trng_len;
    uint32_t es0_clock_select;
} net_proc_boot_args_t;
```

Used to encapsulate the boot arguments for the External System.

- NVDS data is supplied by the main application.
- TRNG (Truly random number) destination address and number of bytes to be generated.
- ESO Clock select, can be 16 (default), 24 or 48Mhz.

SERVICES_Boot_Net_Proc

Syntax:

```
uint32_t SERVICES_Boot_Net_Proc(uint32_t services_handle,
                                net_proc_boot_args_t* boot_args,
                                uint32_t *error_code)
```

Description:

Packages the boot arguments for External system (ExtSys0).

The following steps are performed in this SERVICE:

- *#1 Enable Power to the ExtSys0
- *#2 Load PatchROM from MRAM (which is in Deferred state)
- *#3 Copy the NVDS Data from supplied address
- * #4 Change External Sys0 CPU frequency
- * #4 Generate TRNG value size based on SERVICE call provided width

* #5 Clear EXTSYS1 status

* #6 Release EXTSYS0 CPU

Parameters:

services_handle

net_proc_boot_args_t External System boot arguments
error_code

Returns:

SERVICES_SUCCESS

SERVICES_RESP_UNKNOWN_COMMAND If used with ENSEMBLE devices.

BL_ERROR_* Boot loader error, should PATCHROM fail to load.

Restrictions:

SERVICES_Shutdown_Net_Proc

Syntax:

```
uint32_t SERVICES_Shutdown_Net_Proc(uint32_t services_handle,  
                                     uint32_t *error_code)
```

Description:

Powers off the External System 0

Parameters:

services_handle
error_code

Returns:

SERVICES_SUCCESS

Restrictions:

Document History

Version	Change Log
0.41.1	Editing version derived from v0.41 engineering input